
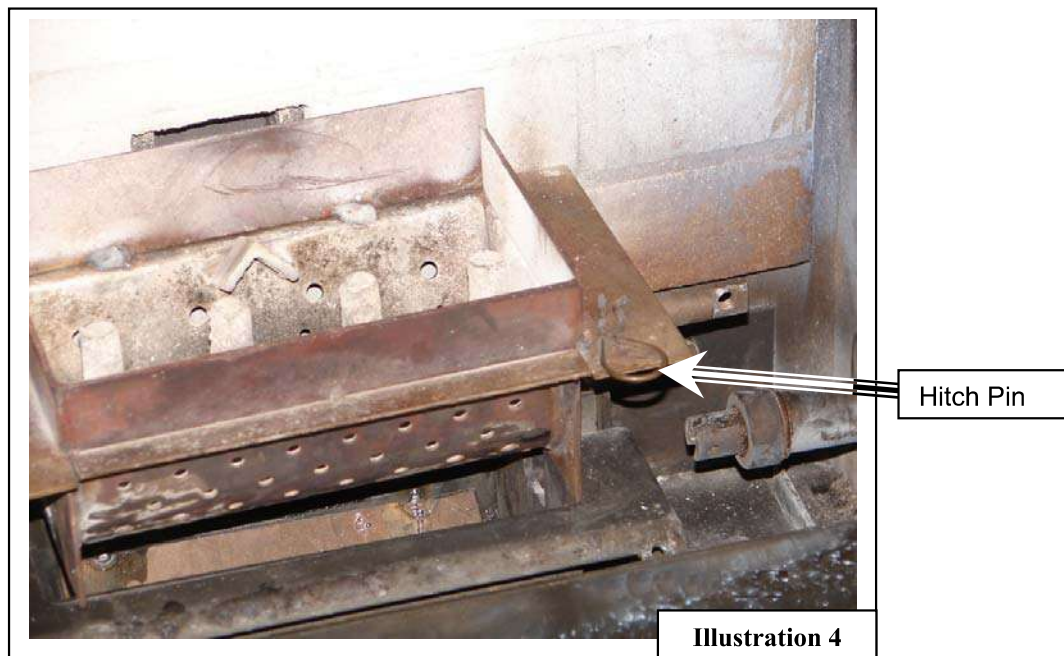


NOTE

If the unit does not start or maintain a fire, you will receive an **E-2** in the Heat Range and Blower Speed window of the Control Board. If this occurs, wait until unit has cooled completely down and repeat.

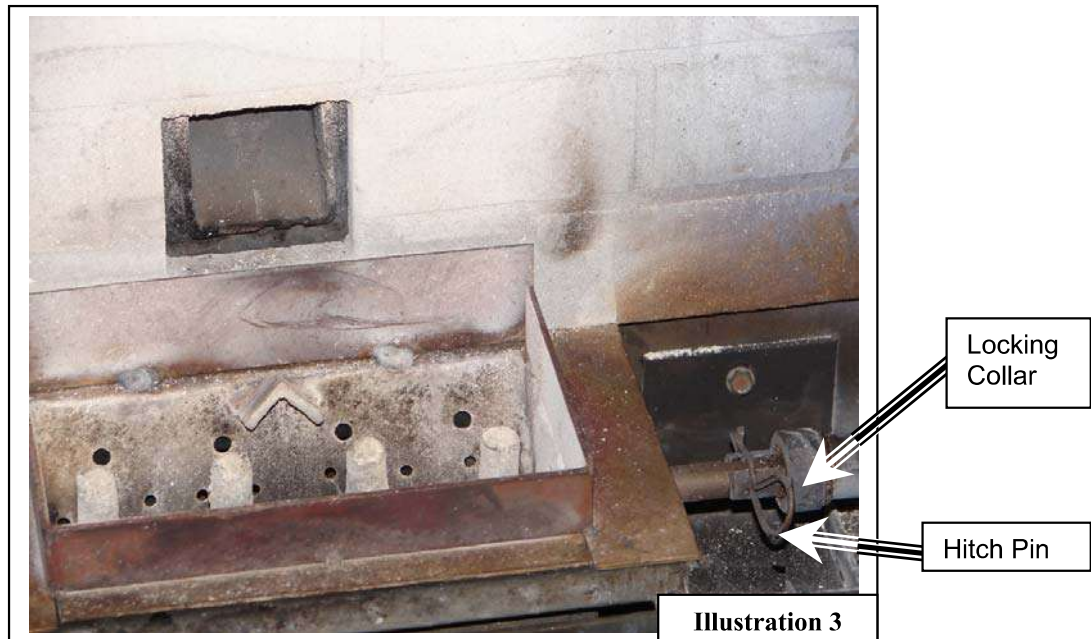

To remove the Stirrer for cleaning

While the unit is **COLD** and the unit is off, press and hold the “AIR ON TEMP” (i.e. “Air On”) button until the Stirrer is at the “12:00” position (with the 4 prongs pointing up). Pull the hitch pin (marked in Illustration 3). Lifting the burnpot and Stirrer at the same time, remove the Stirrer from the burnpot. Clean and clear all holes in the burnpot and replace Stirrer and burnpot back into the unit.

NOTE: When replacing the burnpot, notice there is a welded piece that is always set toward the *back* of the Firebox. Also, be sure to replace the hitch pin.