

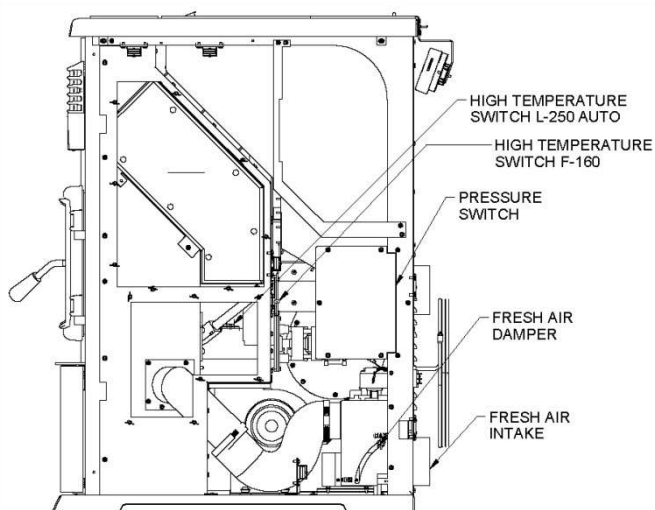


FIGURE 32

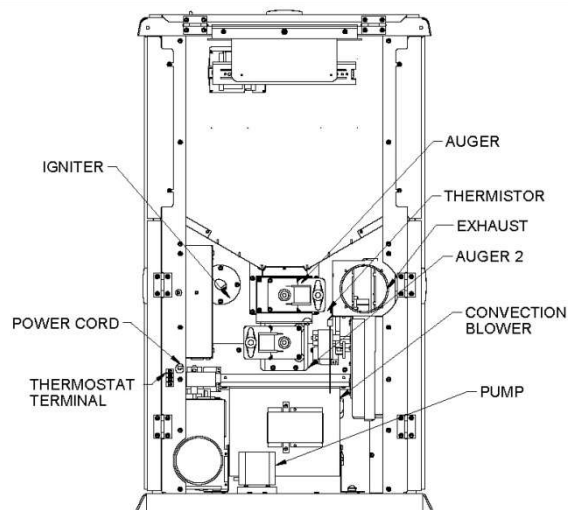


FIGURE 33

5.1 FUSE ACCESS:

All fuses are located inside the pc board box. You must remove the pc board cover to access the fuse. To do so, simply remove the 5 screws securing it in place. Make sure you put the pc board box back in place before you restart the unit.


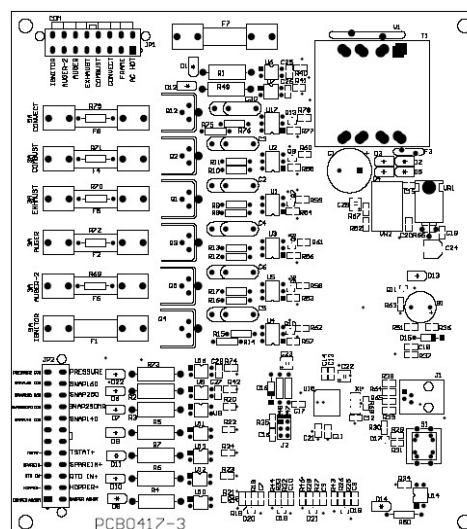


FIGURE 34

11 FUSES ACCESS

WARNING: UNPLUG THE STOVE BEFORE CHANGING THE FUSES.

All fuses are located inside the housing of the electronic board; the housing is on the back of your stove. Unplug your stove and turn the four spring clip to open the housing.

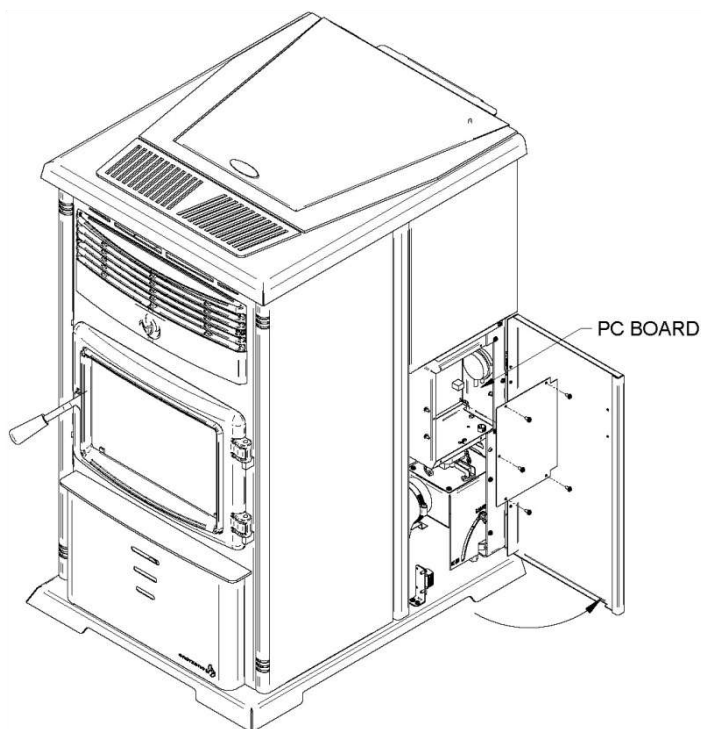