




Appendix 6: Installation of Secondary Air Tubes and Baffle

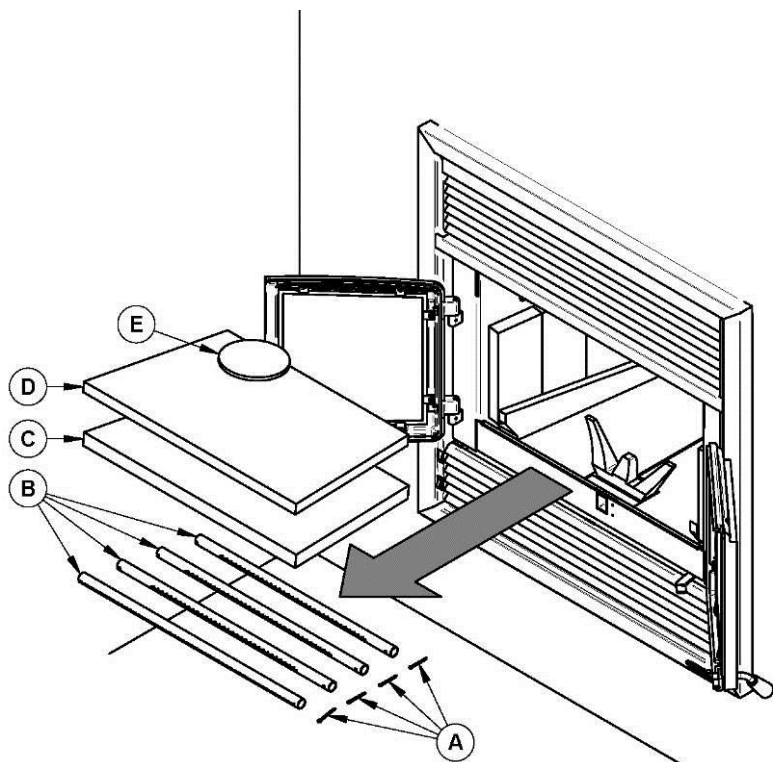

REMOVABLE PARTS	
A	Cotter pins (x4)
B	Air tubes (x4)
C	C-cast baffle (x1)
D	Baffle insulation (x1)
E	Baffle insulation weight (x1)

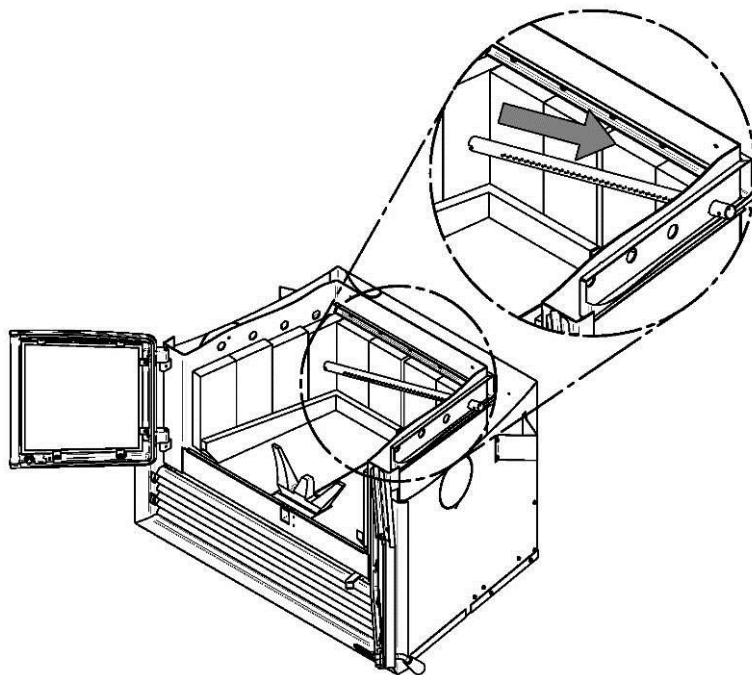

1. Starting with the rear tube, lean and insert the right end of the secondary air tube into the rear right channel hole. Then, lift and push the tube towards the right inside the hole in the right channel.

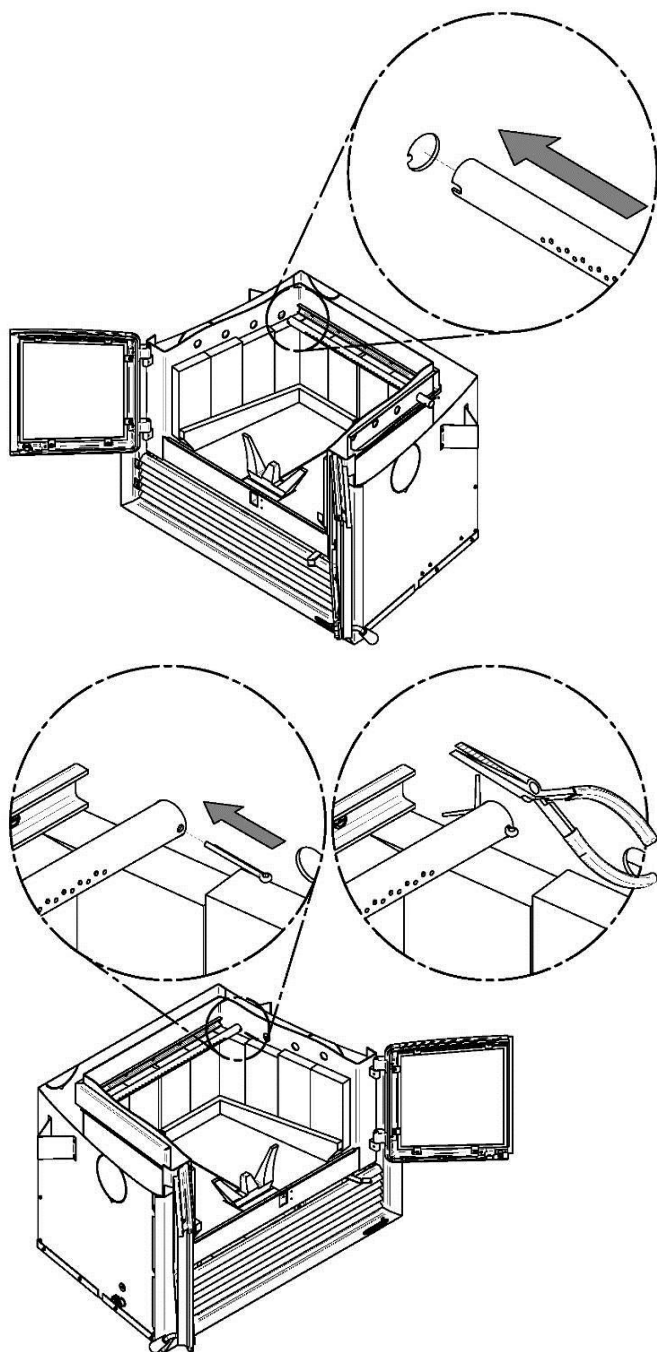

2. Align the notch in the left end of the tube with the tab of the left air channel hole.

3. Insert a cotter pin in the last hole on the right side of the tube. Then bend the tabs on the pin to keep in place.

4. Repeat **steps 1, 2** and **3** for the two tubes in the back then install the baffle. Then, install the two front tubes.

5. To remove the tubes use the above steps in reverse order.

Note that secondary air tubes can be replaced without removing the baffle board.

Important Notes:

The air tubes are identified for placement as follows:

Model	Type of tube
SOLUTION 2.5-ZC fireplace	Front ► 95 holes of 0.141" Middle front ► 67 holes of 0.125" Middle rear ► 67 holes of 0.109" Rear ► 67 holes of 0.101"