

Recommended Heat Ranges:

Low Burn:	Heat Range setting: 1	Room Air Blower setting: 1
Medium Low:	Heat Range setting: 2 – 3	Room Air Blower setting: *
Medium High:	Heat Range setting: 5 – 8	Room Air Blower setting: *
High Burn:	Heat Range setting: 9	Room Air Blower setting: 9

* NOTE: Blower Speed will automatically be adjusted to the desired Heat Range that you select.

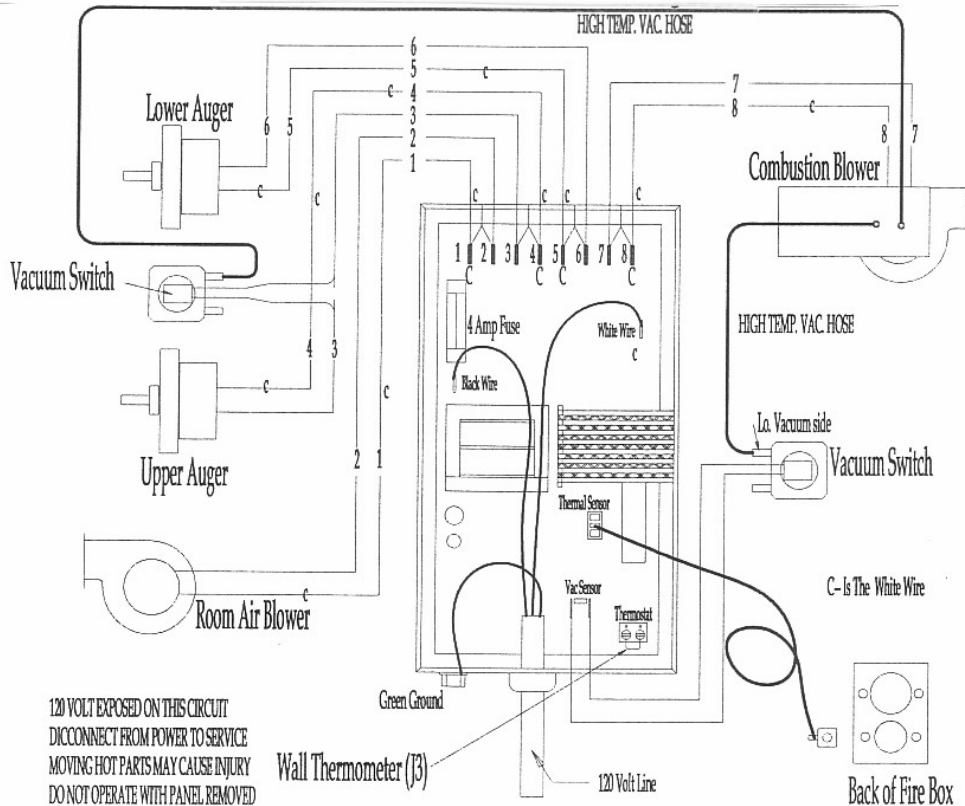
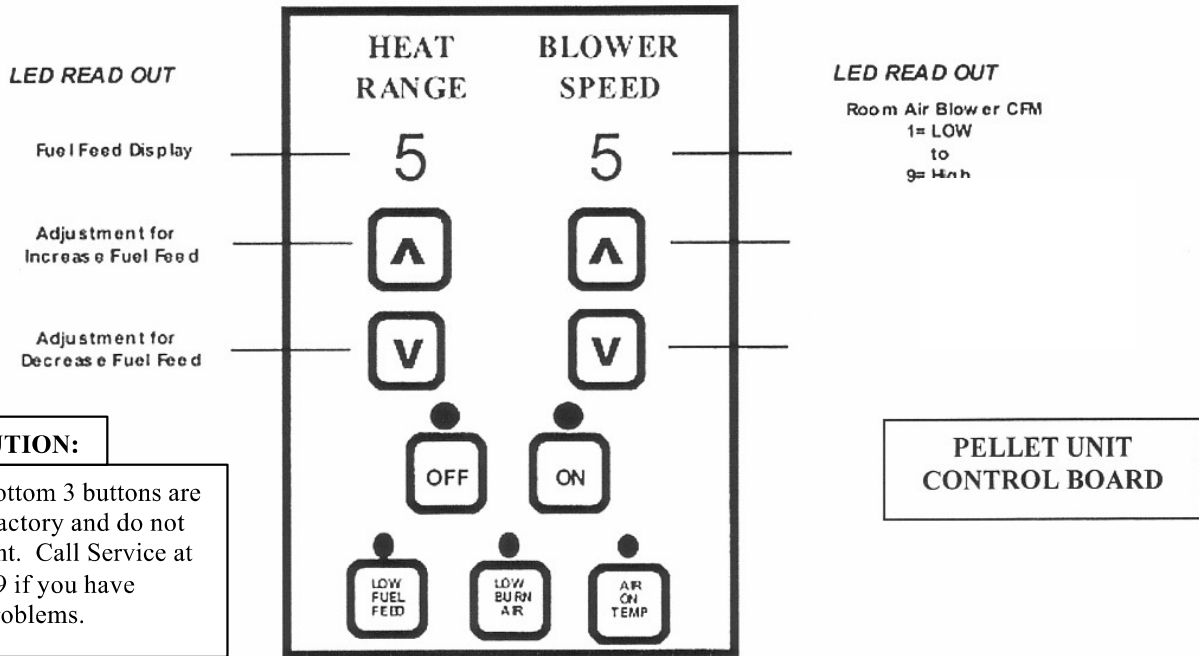


Illustration 2

CONTROL BOARD

The control board (Part #PU-CB98) is a digital read-out board. This board offers a wide variety of settings to operate the unit. The bottom three control buttons are preset at the factory and should *not* require any changes on start-up of the unit. This part can be removed from the unit by loosening the two outside screws and pulling the board back to the inside of the stove. The rear access panel should be removed prior to removing the control board. A 4-amp fuse is used on this control board.

THERMOSTATS

REMOTE: There is now a Remote Thermostat (Part # AC-3001) available for your pellet stove. It comes with everything necessary for quick installation, and has many features to allow remote control of your unit.

WALL: Also, an external wall thermostat (such as our Part # GU-1E30-914) can be used on our pellet units as long as it is a 24-volt that works with millivolt systems. After unplugging the unit, locate the jumper wire (J-3) on the bottom of the control panel. The two screws should then be loosened and the jumper wire removed from the board. Next, the two thermostat lead wires should be slipped into these openings and the screws tightened; the jumper wire should be saved for future operation without a thermostat.

The unit will operate differently once the wall thermostat is connected -- we recommend the stove control board be set at "9" on Heat Range and Blower Speed while using the thermostat. Refer to the section on "Start-up Procedure" for information on cold starts.

Call (800) 516-3636 or log onto www.englishsstoveworks.com to inquire or order these.

ACCESSORY ITEMS

There are accessory items available for your stove, besides the thermostats (see "Thermostats" section). These accessories can be added to your unit at anytime; however, let the stove cool down before adding the items.

AC-103, AC-103BN Lip Trim

There is one piece of J-Channel trim in this kit that snaps onto the ash apron lip of the stove. Match the channel with the correct edge, then remove the protective covering from the trim and force the piece onto the edge. Although it should stay in place, stove cement can be used to secure it if necessary. (NOTE: For stoves manufactured prior to 2001, the part number for this kit is AC-101-PU.)

AC-106-P, AC-106-PBN (SH-106-P) Window Trim

This trim can be attached by using the spring clip and some high temperature silicone. Insert the tee end of the spring clip into the opening on the edge of the trim -- this will allow the clip to fall into the groove. The spring clip will hold well if it is placed on the bottom edge of the trim. We suggest that high temperature silicone be used on the corners to ensure the trim will stay in place.

Accessories can be ordered from the factory at:
(Parts orders ONLY) -- (800) 516-3636, or on our web site: www.englishsstoveworks.com .
Questions/Problems: Please call Customer Service at (800) 245-6489.