

DOOR LATCH

The door latch uses a removable handle. This handle can be found in the owner's manual packet. The handle should be stored inside the front panel in the very bottom shelf. The latch can be adjusted by loosening the screws and moving the plate forward/backward as needed. If the hook should need to be replaced, use a $\frac{5}{32}$ " allen wrench to loosen the bolt going through the hook. Remove the assembly, using care not to lose the spacer collars. Put the bolt through the new hook and place the spacer collars on, and install in the door. Do not over-tighten the bolt.



MAGNETS

On the front of the unit there are two magnets that are used to hold the front panel closed. **Only use these magnets in the manner in which they were designed; improper handling of these magnets could cause injury. Keep out of the reach of children. Do not place the magnets near any electronic items. Use only the magnets that come from England's Stove Works, Inc.** These can be purchased on our website, www.englishstoves.com, or by calling our parts department at 1-800-516-3636. **England's Stove Works, Inc. will not be liable for any injury caused by improper use of magnets, or if any other magnet is used.**

To replace magnets:

- Use a $\frac{5}{16}$ " socket to remove the screw holding the magnet in place.
- Discard the old magnet(s) in an appropriate manner.
- Replace with the new magnet, using the screw previously removed.

HOPPER LID/TOP

The hopper lid is permanently attached to the top. If more room is desired to do any work inside the hopper (cleaning the dust out, etc.), the whole top may be removed.

To remove the hopper top:

- Loosen the two screws under the front of the top using a $\frac{5}{16}$ " socket.
- Next, remove the three screws on the rear of the top that hold the top to the hopper.
- Remove the top and place out of the way while working.
- When ready to put the top back, line up the two slots under the front side of the top with the two screws on the front of the stove.
- Replace the three screws previously removed from the back, then tighten the front screws.