



13.3 Exhaust blower


1. Remove the decorative panel on the right hand side. Then, Remove the two screws **(A)** that hold the panel at the back of the stove. Open and lift the panel to take it off the stove.

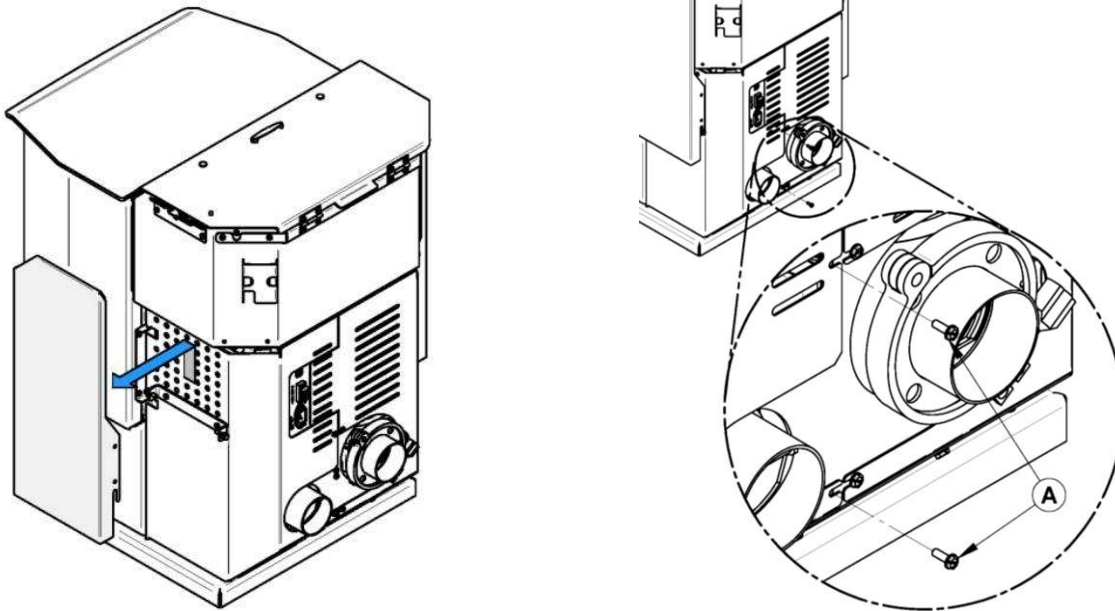

2. Remove the decorative panel on the left hand side. Then, Remove the two screws **(A)** that hold the panel at the back of the stove. Open and lift the panel to take it off the stove.

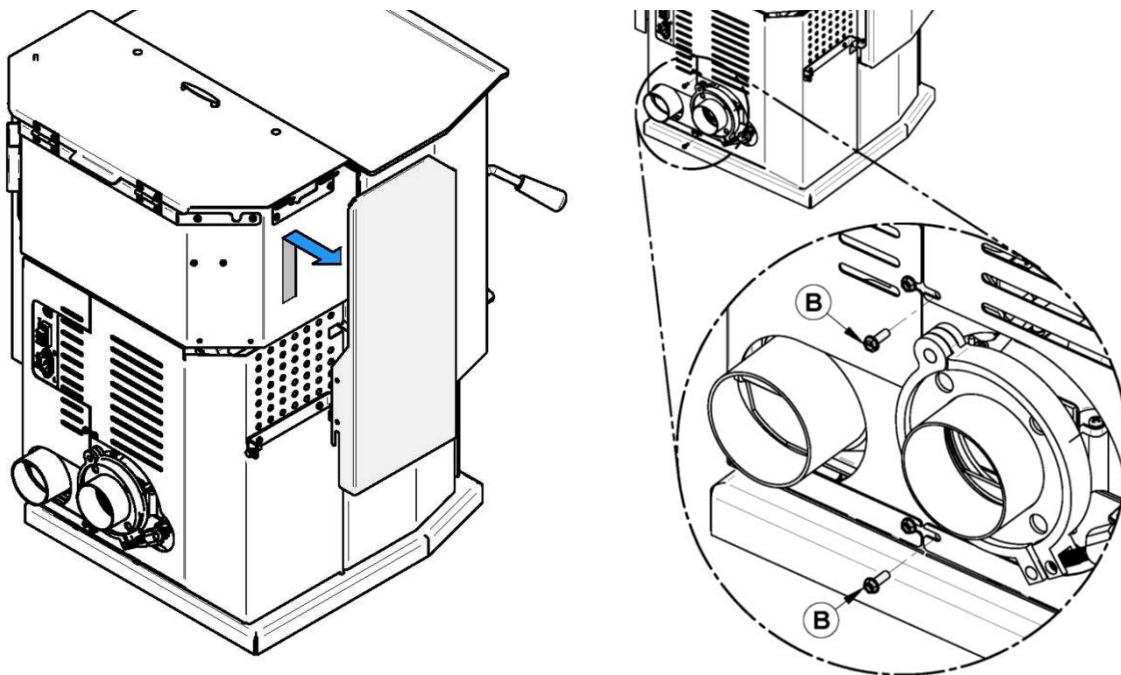

3. Open the left panel and lift it to take it out of the stove **(1)**. Remove the exhaust collar **(R)** from the flue collar **(2)**.

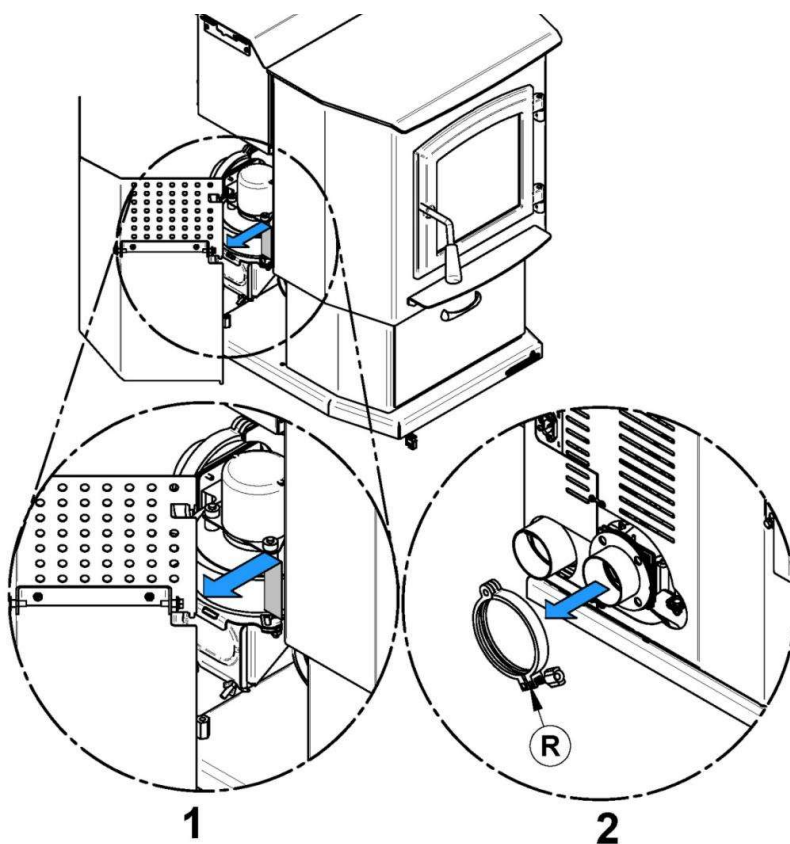

4. Remove the 3 bolts that hold the exhaust motor in place and pull the exhaust motor out of the stove.

