





## SMART CONTROL


-  JIM BOWIE
-  DANIEL BOONE
-  DAVY CROCKETT




# OWNER'S MANUAL

 Safety Information

 App User Guide

 Get to Know Your Grill

 Cleaning & Maintenance

 Assembly & Operation

 Recipe Book



## Welcome to the Nation

Thank you for purchasing a Green Mountain Pellet Grill! We hope that it will provide you with many years of trouble-free service and allow you to cook extraordinary food that will enhance your enjoyment of eating.

Your new grill can grill, smoke, slow-cook, barbecue, braise, roast, bake, and sear at the touch of a button. This manual will help you get the most out of your pellet grill, so please read it thoroughly.

Should an unforeseen problem occur, please check the Troubleshooting section, or visit our website [greenmountaingrills.com/support](http://greenmountaingrills.com/support). After exhausting those possibilities, please feel free to call us at 530-347-9167 and select “Technical Support.”

If you have questions about cooking, please see General Operating Tips and Wood Fired 101 sections in this manual, or visit our website:



[greenmountaingrills.com](http://greenmountaingrills.com)

Remember that your new pellet grill is extremely versatile. While you can grill steaks, hamburgers and all the other traditional “barbecue” fare, you can also prepare a pot roast, smoke fish, bake cookies or bread, slow-cook a brisket or pork butt, roast vegetables, and much more. About the only limit is your imagination... so get creative!

FOLLOW THE **GMG NATION**





Experience the new age of grilling.

---



---

# CONTENTS

<b>Warranty</b> .....	5
<b>Safety Info</b> .....	7
<b>How a Pellet Grill Works</b> .....	13
<b>Premium Pellets</b> .....	15
<b>GMG Rubs &amp; Sauces</b> .....	17
<b>Accessories</b> .....	19
<b>Jim Bowie &amp; Daniel Boone</b> .....	21
Get to Know Your Grill .....	23
Digital Controller .....	25
Key Grill Components .....	27
Assembly .....	31
Prefire Check .....	37
Operation .....	39
<b>Davy Crockett</b> .....	45
Get to Know Your Grill .....	47
Digital Controller .....	48
Key Grill Components .....	49
Assembly .....	52
Prefire Check .....	55
Operation .....	57
<b>General Operating Tips</b> .....	63
<b>Wood Fired 101</b> .....	67
<b>Cleaning &amp; Maintenance</b> .....	71
<b>Troubleshooting</b> .....	73
<b>WiFi App Guide</b> .....	81
<b>Recipes</b> .....	119



**REGISTER YOUR WARRANTY HERE:**

[greenmountaingrills.com/warranty-registration](https://greenmountaingrills.com/warranty-registration)

This LIMITED WARRANTY covers defects in workmanship and materials for a period of three (3) years from the date of first retail purchase. During the warranty period, GMG Products, LLC (dba Green Mountain Grills) will replace or repair, at its sole option, any defective Green Mountain grill returned to us, or to one of our dealers, by its original purchaser. Any claims under this warranty must be received by the expiration of the warranty period.

This warranty does not cover problems that result from abuse, accident, misuse, or problems with electrical power. It does not cover cosmetic elements and components, such as paint and other finishes. It does not cover uses not in accordance with the instruction manual. It does not cover commercial use of the product. It specifically excludes products for which Green Mountain Grills has not received payment.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS WHICH MAY VARY FROM STATE TO STATE (PROVINCE TO PROVINCE IN CANADA). GREEN MOUNTAIN GRILLS RESPONSIBILITY FOR DEFECTS IN MATERIAL AND WORKMANSHIP SHALL BE LIMITED TO REPAIR AND/OR REPLACEMENT AS SET FORTH IN THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES AND WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. NO OTHER WARRANTIES ARE PROVIDED.

IN NO EVENT WILL GMG PRODUCTS, LLC (dba GREEN MOUNTAIN GRILLS) HAVE ANY LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER TO THE ORIGINAL PURCHASER OR WITH RESPECT TO ANY THIRD-PARTY CLAIMS FOR DAMAGES AGAINST THE RETAIL PURCHASER OF THIS PRODUCT. SOME STATES (PROVINCES IN CANADA) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS MAY NOT APPLY TO YOU.

To exercise your rights under this warranty, contact the dealer from whom you purchased it, or call us at 530-347-9167.

© 2019 GMG Products LLC - All Rights Reserved



## GENERAL WARNINGS

PLEASE READ, UNDERSTAND, AND FOLLOW THE DIRECTIONS IN THIS MANUAL.

- THIS IS AN ELECTRIC APPLIANCE. OBSERVE ALL NORMAL SAFETY PROCEDURES FOR A HIGH VOLTAGE APPARATUS.
- FOR OUTDOOR USE ONLY.
- DO NOT USE IN ANY ENCLOSED AREA OR ANY AREA WITHOUT ADEQUATE VENTILATION.
- DO NOT MODIFY THIS GRILL IN ANY MANNER NOT IN ACCORDANCE WITH MANUFACTURER GUIDELINES.
- DO NOT OPERATE THIS GRILL OTHER THAN AS SPECIFIED IN THIS MANUAL.
- BE AWARE OF AND RESPOND TO THE INHERENT DANGER OF ANY APPLIANCE THAT PRODUCES FLAMES.
- DO NOT USE THE GRILL IN RAIN OR AROUND ANY WATER SOURCE SUCH AS SPRINKLERS.
- DO NOT STORE OR USE COMBUSTIBLE MATERIALS NEAR THIS GRILL.
- KEEP THE ENTIRE GRILL A MINIMUM OF 24" FROM ALL COMBUSTIBLES.
- DO NOT PUT A BARBECUE COVER OR ANYTHING FLAMMABLE ON OR UNDER THE GRILL WHILE IN USE.
- DO NOT ALLOW WATER TO ENTER THE PELLET HOPPER. PELLETS EXPOSED TO WATER TURN INTO SAWDUST THAT THE AUGER FEED SYSTEM WILL NOT DELIVER TO THE FIREBOX.
- AFTER A PERIOD OF STORAGE OR NONUSE, THE GRILL SHOULD BE CHECKED FOR AUGER AND BURN POT OBSTRUCTIONS, FOREIGN OBJECTS INSIDE BOTH THE GRILL AND THE HOPPER, AND AIR BLOCKAGE, BEFORE USE, IN ACCORDANCE WITH THE CORRECT PROCEDURES SET FORTH IN THIS MANUAL.

- YOU MUST CONTACT YOUR LOCAL HOMEOWNERS' ASSOCIATION, BUILDING, FIRE OFFICIALS, OR OTHER AUTHORITY HAVING JURISDICTION, TO OBTAIN THE NECESSARY PERMITS, PERMISSION OR INFORMATION ON ANY INSTALLATION RESTRICTIONS, SUCH AS ANY GRILL BEING INSTALLED ON A COMBUSTIBLE SURFACE, INSPECTION REQUIREMENTS, OR EVEN THE ABILITY TO OWN AND OPERATE SUCH A GRILL IN YOUR AREA.

- DO NOT OPERATE THE GRILL WHILE TRANSPORTING IT! THE GRILL MUST ALWAYS BE STATIONARY WHEN IT IS ON. MAKE CERTAIN THAT THE GRILL IS COLD AND ALL FIRE IN THE FIREBOX IS EXTINGUISHED BEFORE MOVING IT.

## PELLET AND OTHER FUEL RESTRICTIONS

- THIS GRILL IS DESIGNED TO BURN ONLY FOOD-SAFE HARDWOOD PELLETS. DO NOT USE ANY OTHER TYPE OF FUEL.
- DO NOT USE ANY PELLETS LABELED AS HAVING ADDITIVES OR DESIGNED FOR USE IN HOME HEATING SYSTEMS.
- DO NOT USE SOFTWOOD PELLETS. THE SMOKE CONTAINS DANGEROUS PHENOLS THAT YOU DO NOT WANT TO INGEST.
- DO NOT USE HEATING PELLETS, AS THEY MAY CONTAIN UNSAFE IMPURITIES THAT COULD HARM YOUR HEALTH OR YOUR GRILL.
- GMG'S GRILLS ARE DESIGNED FOR AND TESTED WITH GREEN MOUNTAIN'S BRAND OF PELLETS. WHILE YOU MAY USE OTHER BRANDS OF PELLETS, WE DO NOT WARRANT THAT THE GRILL WILL PERFORM AT THE SAME LEVEL.
- NEVER USE LAVA ROCK, NONPELLETIZED WOOD, OR CHARCOAL IN THE GRILL.
- DO NOT USE ANY GASOLINE, LANTERN FUEL, WHITE GAS, DIESEL FUEL, PETROL, LIGHTER FLUID, CHARCOAL LIGHTER, ALCOHOL GEL, OR ANY OTHER FUEL OR ACCELERANTS FOR LIGHTING OR RELIGHTING THE GRILL.



### OPERATING PRECAUTIONS

- THIS GRILL MUST NOT BE USED BY PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING THE USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY AND ARE BEING SUPERVISED BY A RESPONSIBLE ADULT.
- CHILDREN SHOULD NEVER USE THE GRILL.
- ACCESSIBLE PARTS OF THE GRILL WILL BE VERY HOT, AND YOUNG CHILDREN AND PETS MUST BE KEPT AWAY FROM THE GRILL WHILE IT IS IN USE.
- NEVER LEAN OVER AN OPEN GRILL OR PLACE HANDS OR FINGERS ON THE FRONT EDGE OF THE GRILL OR IN THE PELLET HOPPER.
- DO NOT USE ACCESSORIES NOT DESIGNED FOR USE WITH THIS GRILL.
- USE HEAT RESISTANT BARBECUE MITTS OR GLOVES WHILE OPERATING THE GRILL.
- DO NOT TRANSPORT THE GRILL WHILE OPERATING OR WHILE THE GRILL IS HOT. MAKE SURE THAT THE FIRE IS COMPLETELY OUT AND THE GRILL IS COMPLETELY COOL TO THE TOUCH BEFORE MOVING IT.
- ASHES SHOULD BE PLACED IN A METAL CONTAINER WITH A TIGHT-FITTING LID, AND THE CONTAINER MUST BE PLACED ON A NONCOMBUSTIBLE FLOOR OR ON THE GROUND, WELL AWAY FROM ALL COMBUSTIBLE MATERIALS. ASHES SHOULD BE RETAINED IN THE CONTAINER UNTIL ALL CINDERS HAVE THOROUGHLY COOLED BEFORE FURTHER DISPOSAL.

### WARNINGS RELATING TO USE OF THE REMOTE CONTROL/SMART CONTROL APP

- IF USING A REMOTE CONTROL OR THE REMOTE CELL PHONE APPLICATION TO CONTROL THE OPERATION OF THE GRILL, YOU MUST FIRST MAKE SURE THAT ALL SAFETY PRECAUTIONS OTHERWISE APPLICABLE TO THE OPERATION OF THE GRILL HAVE BEEN OBSERVED PRIOR TO STARTING THE GRILL. MOREOVER, A RESPONSIBLE ADULT FAMILIAR WITH THE OPERATION OF THE GRILL SHOULD BE AT ALL TIMES ABLE TO VIEW THE GRILL, AND IS IN CLOSE-ENOUGH PROXIMITY TO THE GRILL TO BE ABLE TO ADDRESS ANY EMERGENCY CONDITIONS, BEFORE OPERATING THE GRILL REMOTELY.

### MAINTENANCE ISSUES

- THE GRILL MUST BE CLEANED AND MAINTAINED REGULARLY IN ACCORDANCE WITH THE INSTRUCTIONS SET FORTH IN THIS MANUAL.
- DO NOT MODIFY OR REMOVE ANY OF THE PARTS OF THE GRILL.
- ALWAYS UNPLUG THE GRILL BEFORE PERFORMING ANY SERVICE OR MAINTENANCE.
- NEVER ADD PELLETS BY HAND TO THE FIREPOT WHILE THE GRILL IS RUNNING. IF THE GRILL RUNS OUT OF PELLETS DURING COOKING, LET THE GRILL COMPLETELY COOL AND START AGAIN FOLLOWING THE INITIAL START-UP INSTRUCTIONS.
- ALWAYS BE SURE TO INSTALL THE HEAT SHIELD PROPERLY, IN ACCORDANCE WITH THE INSTRUCTIONS ELSEWHERE IN THIS MANUAL, TO REDUCE RISK OF A GREASE FIRE.
- GREASE FIRES ARE OFTEN CAUSED BY FAILING TO PROPERLY MAINTAIN THE GRILL BY CLEANING THE GREASE PAN AND THE GREASE DRAIN CONSISTENTLY. IF A GREASE FIRE OCCURS, TURN THE CONTROL UNIT TO "OFF," AND LEAVE THE LID CLOSED UNTIL THE FIRE IS OUT. DO NOT UNPLUG THE POWER CORD. IF AN UNCONTROLLED FIRE DOES OCCUR, IMMEDIATELY CALL THE LOCAL FIRE DEPARTMENT. NEVER PUT WATER ON THE FIRE.

## IMPORTANT SAFETY INFO



- MAKE ABSOLUTELY CERTAIN THE GRILL AND ASHES ARE COLD BEFORE ACCESSING THE INTERIOR. DO NOT REMOVE HOT ASH FROM THE GRILL, AS IT MAY CAUSE A FIRE ELSEWHERE.

### CREOSOTE

- OVER TIME, A LAYER OF TAR-LIKE SOOT OR CREOSOTE MAY FORM INSIDE YOUR GRILL. YOU SHOULD REGULARLY REMOVE SUCH SUBSTANCES FROM INSIDE YOUR GRILL, AS A CREOSOTE FIRE CAN BURN OUT OF CONTROL.
- DARK AND SOOTY SMOKE MAY INDICATE THE PRESENCE OF A CREOSOTE BUILDUP INSIDE YOUR GRILL. IF YOU NOTICE THIS, TURN OFF THE GRILL AND WAIT FOR IT TO COOL COMPLETELY. THEN, REMOVE ANY COLD CREOSOTE FROM THE GRILL WITH A TOWEL.
- SHOULD A CREOSOTE FIRE OCCUR, TURN THE CONTROL UNIT TO “OFF,” AND LEAVE THE LID CLOSED UNTIL THE FIRE IS OUT. DO NOT UNPLUG THE POWER CORD. DO NOT TRY TO REMOVE THE GRILL, TRY TO SMOTHER THE FIRE, OR PUT WATER ON THE FIRE. IF AN UNCONTROLLED FIRE DOES OCCUR, IMMEDIATELY CALL THE FIRE DEPARTMENT.

### CARBON MONOXIDE WARNING

- THE GRILL MUST BE OPERATED AT ALL TIMES IN ACCORDANCE WITH THESE GUIDELINES TO PREVENT CARBON MONOXIDE FROM POISONING YOU, YOUR FAMILY, OR OTHERS.
- CARBON MONOXIDE IS COLORLESS AND ODORLESS, SO IT IS IMPORTANT TO OPERATE THE GRILL IN STRICT ACCORDANCE WITH THIS OPERATING MANUAL, AND THESE WARNINGS.
- THE GRILL MUST AT ALL TIMES BE OPERATED OUTSIDE, IN A WELL-VENTILATED AREA, AND IN STRICT ACCORDANCE WITH ALL OTHER INSTRUCTIONS IN THIS MANUAL TO AVOID CARBON MONOXIDE POISONING.

## WARNING PLEASE READ CAREFULLY

- THE SYMPTOMS OF CARBON MONOXIDE POISONING INCLUDE HEADACHES, DIZZINESS, WEAKNESS, NAUSEA, VOMITING, SLEEPINESS, AND CONFUSION. CARBON MONOXIDE REDUCES THE BLOOD'S ABILITY TO CARRY OXYGEN, AND LOW BLOOD OXYGEN LEVELS CAN RESULT IN LOSS OF CONSCIOUSNESS AND DEATH.
- ALCOHOL CONSUMPTION AND DRUG USE INCREASE THE EFFECTS OF CARBON MONOXIDE POISONING.
- CARBON MONOXIDE IS ESPECIALLY TOXIC TO MOTHERS AND CHILDREN DURING PREGNANCY, INFANTS, THE ELDERLY, SMOKERS, AND PEOPLE WITH BLOOD OR CIRCULATORY SYSTEM PROBLEMS, SUCH AS ANEMIA OR HEART DISEASE.
- YOU MUST SEE A DOCTOR IF YOU DEVELOP EITHER COLD OR FLU-LIKE SYMPTOMS WHILE COOKING IN THE VICINITY OF THE GRILL, AS CARBON MONOXIDE POISONING CAN EASILY BE MISTAKEN FOR A COLD OR FLU AND IS OFTEN DETECTED TOO LATE.



### PROP 65 - STATE OF CALIFORNIA

- THIS PRODUCT CAN EXPOSE YOU TO WOOD DUST, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, AND TO CARBON MONOXIDE, WHICH IS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM, OR DEATH. FOR MORE INFORMATION, GO TO [WWW.P65WARNINGS.CA.GOV](http://WWW.P65WARNINGS.CA.GOV). THIS PRODUCT IS NOT FOR HUMAN CONSUMPTION.

# HOW A PELLET GRILL WORKS

## WOOD FIRED SCIENCE

A motor turns an auger that feeds pellets into a Venturi-style firebox. There, a hot rod automatically ignites the pellets. The hopper fan provides airflow into the firebox creating a burn pot cyclone for maximum heat distribution and maintains positive pressure that prevents burn-back into the auger tube.

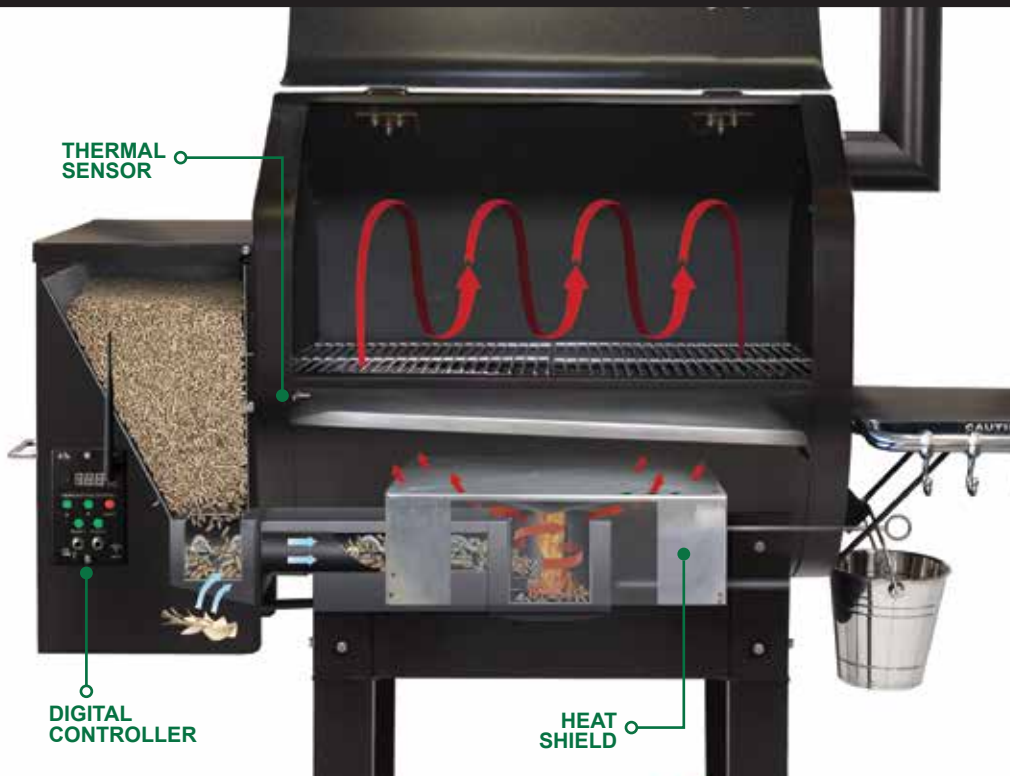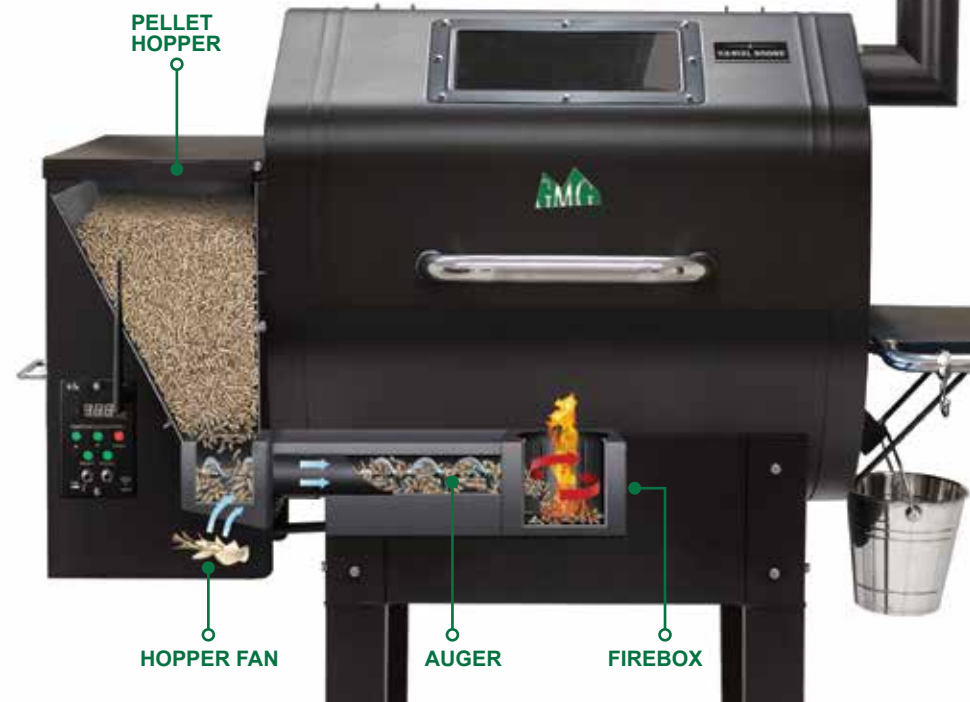


## HEAT DISTRIBUTION

The Venturi-style firebox creates maximum heat distribution and complete combustion of the pellets with minimal waste. The heat shield that covers the firebox distributes the heat to both sides of the grill, flowing up into the convection-style grill chamber. The thermal sensor mounted inside the grill sends data to the on-board computer ten times every second, and the digital controller adjusts the air and pellet flow to maintain the temperature you set.

# PREMIUM HARDWOOD PELLETS

Our pellets are made out of 100% kiln dried sawdust that never touches the floor. The pellets are held together with the natural lignin in the wood. GMG 28 lb bags provide 40% more than our competitors' 20 lb bags. Super low ash content with no fillers or additives!

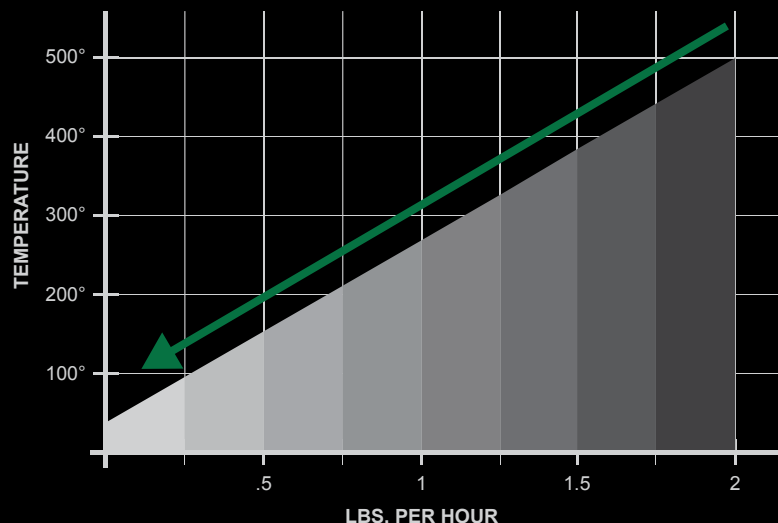

**These test results were obtained under the following conditions:**  
Ambient temperature range of 52-56 degrees Fahrenheit. Usage of GMG Premium Blend Pellets. No food in cavity. No wind.



**Your results may differ due to:**  
Food in cavity which absorbs BTU's as it cooks. Usage of different pellets. Opening and closing the lid. Operating in higher or lower temperatures than testing conditions. Operating in wind.



## Premium Apple Blend

This sublime blend of Apple Wood, American Hickory, and Red Oak is mature but gentle. If you're unsure about which pellets to use, choose the Apple Blend for hardy flavors. You can't go wrong with this one!



## Premium Gold Blend

This mellow blend of Red Oak, American Hickory, and Mountain Maple subtly flavors your food without overpowering it. These are some of the hardest of the hardwoods; this blend produces a long burn with modest smoke.



## Premium Fruitwood Blend

This bold blend of Orchard Cherry, American Beech, and Sweet Pecan (yes, pecan is a fruit!) smells sweet when you cook with it and adds character to whatever you grill. This blend is favored by competition barbecue teams nationwide for its flavorful light smoke.



## Premium Texas Blend

This aromatic blend of Black Oak, American Hickory, and a hint of Texas Mesquite offers more smoke than our other blends. The pellets are a deep chocolate brown and burn hot. If you want big taste, the Texas Blend is right for you.



## Premium Gourmet Blend

This 8 lb. stand-up resealable bag of Gourmet Blend pellets is a perfect blend of Black Oak, American Hickory, and Texas Mesquite. This bag is space-saving for camping, RV'ing, picnicking, and tailgating specifically designed for the Davy Crockett portable grill.

# RUBS



**Fish** – Exotic ingredients like sereh powder, green peppercorns, and cilantro season fish and seafood perfectly.

**Wild Game** – This pleasant, piquant spice rub will enrich your venison, bear, or bison, but try it on lamb, pork, and beef too.

**Roasted Garlic & Chipotle** – This will add zest, charm, and dignity to ribs, roasts, chicken, and vegetables.

**Sizzle Blend** – If it sizzles when you cook it, add this! You will love it!

**Beef** – Smoked paprika, mustard, cayenne, and other spices will enhance the flavor of any beef.

**Pork** – A winning combination of 11 robust spices give this rub the potential to turn your ribs, butt, or loin into a blue ribbon dish.

**Poultry** – A dash of savory adds just the right flavor to make your fowl taste simply delectable.

**South of the Border** – If you use this in your Mexican food, amigo, you will think you're in Cabo San Lucas!

# SAUCES



**Heat & Sweet** – This sweet n' spicy dipping and grilling sauce complements wings, ribs, pulled pork – even French fries.

**Pitmaster Sauce** – The latest addition to our sauce lineup comes from Rooftop Barbeque team. This sauce has the perfect blend of sweet and spicy. Be prepared to be amazed with the flavors of this perfectly blended sauce.

**Cherry Chipotle** – This decadent mixture of fruit and fire will add zest to ribs, pork, vegetables, and anything else you think needs a hint of heat.

**Cattle Drive** – Our classic sauce will perfectly season your meats with the traditional style of the Old West.

**Pizza Sauce** – Take your wood-fired pizza to the next level with this fresh Italian-inspired blend!



# ACCESSORIES



Be sure to visit your local dealer to pick up these great accessories for your new Green Mountain Grill.



## Grill Covers

Our form-fitting grill covers will withstand the toughest weather conditions. Sizes available for each grill model.



## Thermal Blankets

Keep your grill warm in the winter time and cut down on your pellet usage by up to 50%. Sizes available for each grill model.



 
## Davy Crockett Tote Camo

Travel in style with our New Davy Crockett Carrying Tote!



## Davy Crockett Tote Black

Travel in style with our New Davy Crockett Carrying Tote!



## Rib Rack

Grill 7 racks of ribs at the same time with the GMG vertical rib rack! Fits JB and DB only.



## Smoke Shelf Upper Racks

Add more cooking room to your grill with a smoke shelf.



## Spritz Bottle

Perfect to keep meats, poultry, and even fish nice and moist while grilling.



## Grill Utensils

Grill in style with a set of GMG Grill Utensils.



## G-Mats

Teflon-coated fiberglass fabric cooking mats, safe for use up to 450°. Nonstick (both sides are usable).



## Thin Blue Smoker

Expandable smoke tube with easy slide extension, 11"-18" for maximum smoke flavor.



 
## Wood-Fired Pizza Attachment

Convert your Daniel Boone or Jim Bowie model into a wood-fired gourmet pizza oven.



## Wood Pizza Peel

Convert your Daniel Boone or Jim Bowie model into a wood-fired gourmet pizza oven.



## Griddle

Turn your grill into a stove top and cook bacon, eggs, sandwiches, pancakes and more!



## Mitts

These handsome, extra-heavy-duty mitts will protect your hands and make you look like a million dollars!



## Apron

Save the drippings for later and look like a pro while you're at it.



## Drip-EZ Grease Tray Liners

Place the stack of 3 liners on your grease tray to collect drippings for easy cleanup!



## Infrared Thermometer

Accurately measure your pizza stone temperature with a range of -58°F-1022°F (-50°C - 550°C)



## Digital Probe Thermometer

Fold out instant-read food thermometer with range from -4°F to 392°F (-20°C to 200°C).



## Grill Pan

Great for keeping sauces, beans and sides warm on the grill.



## GMG Hats

Look good alongside your grill in this premium quality headwear!



## Food Porter

Keep your food cold or hot for up to 4 hours. Great for travel and outdoor use.



## Drip-EZ Grease Bucket Liners

Place a liner in your grease bucket to collect drippings for easy cleanup!

  
**DANIEL BOONE**



  
**JIM BOWIE**



# GET TO KNOW YOUR

**JIM BOWIE**



- |                             |                                |
|-----------------------------|--------------------------------|
| <b>1</b> Thermal Sensor     | <b>8</b> Firebox               |
| <b>2</b> Pellet Hopper      | <b>9</b> AshVac                |
| <b>3</b> Digital Controller | <b>10</b> Heat Shield          |
| <b>4</b> Low Pellet Alarm   | <b>11</b> Grease Tray          |
| <b>5</b> Combustion Fan     | <b>12</b> Drip Bucket          |
| <b>6</b> Auger              | <b>13</b> Heat Shield Adjuster |
| <b>7</b> Igniter            | <b>14</b> Chimney              |

# WOOD PELLET GRILL

**DANIEL BOONE**



- |                             |                                |
|-----------------------------|--------------------------------|
| <b>1</b> Thermal Sensor     | <b>8</b> Firebox               |
| <b>2</b> Pellet Hopper      | <b>9</b> AshVac                |
| <b>3</b> Digital Controller | <b>10</b> Heat Shield          |
| <b>4</b> Low Pellet Alarm   | <b>11</b> Grease Tray          |
| <b>5</b> Combustion Fan     | <b>12</b> Drip Bucket          |
| <b>6</b> Auger              | <b>13</b> Heat Shield Adjuster |
| <b>7</b> Igniter            | <b>14</b> Chimney              |

# DIGITAL CONTROLLER



- 1 Antenna Connection**  
Standard on WiFi Smart Control models only
- 2 Digital Readout Display**  
Displays temperature and status codes:  
**OFF** - Grill Is Off  
**FAN** - Fan Mode  
**UPD** - Updated  
**NFD** - No Food Detected  
**FAL** - Ignition Failure  
**SEN** - Thermal Sensor Issue
- 3 Signal Indicator Light**
- 4 Temperature Up**  
5-degree increment control
- 5 Temperature Down**  
5-degree increment control
- 6 Power Button**
- 7 Food Probe 1 Button**  
When the food probe is connected, press to read the internal temperature of your food. Press again to switch back to grill temperature.
- 8 Food Probe 1 Connection**  
Insert a food probe here and run it up and through the steel swinging door on the left side of the grill.
- 9 Food Probe 2 Button**  
When the food probe is connected, press to read the internal temperature of your food. Press again to switch back to grill temperature.
- 10 Food Probe 2 Connection**  
Insert another food probe here and run it up and through the steel swinging door on the left side of the grill.
- 11 USB Connection**  
Plug in USB to charge a phone or other devices.

# KEY GRILL COMPONENTS



**Firebox:** This sits at the bottom of the grill, and pellets arrive into it via an auger tube attached to its left side. This is also called a burn pot.



**Igniter:** You will find the igniter (also called a hot rod) in the firebox. It should protrude about 1.5–2” into the firebox. This rod ignites the pellets to start the fire.



**Thermal Sensor:** This device sends data to the computer ten times per second. The computer then averages these readings over slightly longer periods of time and adjusts the air and pellet flow to maintain an accurate temperature in the cavity.




**Heat Shield:** Creates maximum heat distribution between the left and right side of the grill chamber.




**Heat Shield Adjuster:** This allows you to slide the heat shield left and right to control heat distribution. **Move toward the heat:** for example, if the grill is hotter on the right side, move the heat shield slightly to the right to even out the temps.




**Grease tray:** This slopes downhill from left to right and carries the drippings from your food into the grease bucket for easy disposal. **Make sure the CIRCLE cutout is on the LEFT SIDE.**

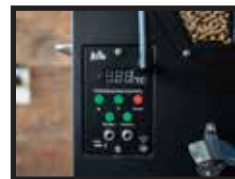

**Digital Controller:** This is a state-of-the-art PID (calculus-based) computer that will keep your grill at a reasonably steady temperature.

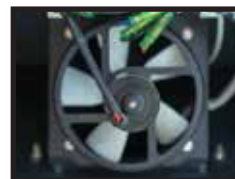

**Combustion Fan:** This fan is located under the hopper and blows air into the firebox (burn pot). The speed of this fan will vary during normal operation.

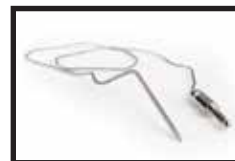

**Meat Probes:** To use this feature, just plug the connector into the receptacle on the front of the controller.



Lift the stainless flap on the left side of the grill and push the probe through the hole. Then, insert the probe into the center of the food you are cooking. Press either the Probe 1 or 2 button to display the temperature of that probe. This process takes a minute or two to stabilize.

To return to the grill temperature display, simply press the probe button again. If you do not have the probe installed in the control panel, then your digital display will read “NO FD” (no food) when you press either probe button. The probe is not suitable for reading temperatures above 257°F (150°C).



**AshVac:** This allows you to connect a Shop-Vac to clean out the base of the burn pot. **NEVER** pull hot ash out of the firebox. Make sure the fire is completely out before using this feature of the grill! Wait at least 1 hour after you shut down the grill before attempting to pull ash out through the clean-out.



**Low Pellet Alarm:** Inside the hopper is a low pellet alarm. When the level of pellets falls below this sensor, an alarm sounds to let you know that you need to fill the hopper back up. Once this alarm goes off, you should add pellets to prevent fuel shortage and resultant temperature drops.



**Pellet Dump:** Please ensure that the stainless steel pellet dump slider is in place before filling the hopper with pellets.  
*\*Versions may vary based on model.*



**Hopper Lid:** Keep the hopper lid closed at all times while your grill is on. Obviously, if you need to refill the hopper, you can make a brief exception. The fan inside the hopper must blow air into the auger tube to prevent burn-back from the firepot. If the hopper lid stays open, this air pressure just escapes into the atmosphere.



**Hopper Window:** This allows you to always keep an eye on your pellet supply.



**Auger:** This is found at the bottom of the hopper and feeds pellets into the firebox.



**Grill Lid Window:** This allows you to take a peek at your food without disrupting the internal temp.



**Chimney Cap:** Always leave this open. Your grill needs to draft. Always make sure there is at least a two-finger or 1.5 inch opening.

**Grill Shelving:**



Front



Side



Bottom



**Bottle Opener:** No more looking for the opener! It has a durable stainless steel design.

# ASSEMBLY



We recommend 2 people for a safe and proper assembly.

Also check out our Assembly & Setup section on our videos page: [www.greenmountaingrills.com/videos](http://www.greenmountaingrills.com/videos)

## 1 STAND BOX RIGHT SIDE UP & OPEN TOP



Remove front shelf parts, legs, and top Styrofoam and set aside. You will need the Styrofoam again, so keep it nearby.

## 2 REMOVE THE INTERNAL GRILL PARTS



To make it easier to open the grill lid, cut down the front corners of the box about 10 in.



Pull back the plastic and open the grill lid.



Remove the parts from inside the grill and set aside.

## GRILL PARTS INVENTORY



### 3 REPLACE THE STYROFOAM & FLIP UPSIDE DOWN



Close the lid and replace the Styrofoam back on top of the grill. This will prevent scratching of the grill when you flip it.

### 4 INSTALL THE LEGS



Install the legs as shown. The caster legs should be closest to the hopper side.

### 5 FLIP RIGHT SIDE UP AND REMOVE THE BOX



### 6 INSTALL THE BOTTOM SHELF

Align the shelf with the holes located on the inside of the 4 legs. Thread the bolt through the legs into the shelf and secure.



### 7 INSTALL THE FRONT SHELF

First, install the shelf brackets onto the front of the grill. Place the shelf on top and secure it to the brackets.



### 8 PRIME THE FIREBOX



**Important:** Pour the contents of the Ziploc bag into the firebox before you install the rest of the parts. This is part of the initial starting procedure.

### 9 INSERT THE INTERNAL PARTS




#### HEAT SHIELD SLIDER

The slider brackets are preinstalled and located along the back and front side of the inside base of the grill.




#### HEAT SHIELD

Place the heat shield into the slider brackets to properly sit over the firebox. Line it up per the measurements of the grill models listed below.

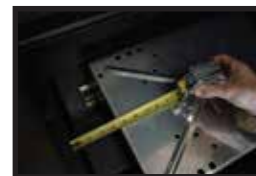

**DB**  
4.25"  
From  
left wall.

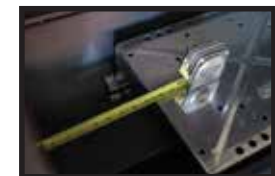

**JB**  
9.25"  
From  
left wall.



### HEAT SHIELD ADJUSTER

Insert the rod into the hole on the right side of the grill to align and thread into the right side of the heat shield.



### GREASE TRAY

Insert the grease tray with the circle cutout on the **LEFT SIDE** near the thermal sensor and the half-moon cutout on the **RIGHT SIDE**.



Make sure the grease tray is installed correctly to ensure proper grease drainage and thermal sensor reading.



### GRILL GRATES

Insert the grates so that they sit flush with the back and front edges of the grill surface.

## 9 INSTALL THE LID HANDLE

Secure each end of the handle with a thermal insulation washer between the stainless handle base on the outside and the metal lid. Insert another one between the bolt and the metal lid on the inside. This will prevent the handle from becoming too hot during operation.



## 10 INSTALL THE CHIMNEY

Unscrew the 3 bolts from the side of the grill. Install the chimney using those 3 bolts. Make sure the gasket is between the chimney and the grill. Finally, twist on the chimney cap. Make sure there is at least a 1.5 in. open gap for proper ventilation.




## 11 INSERT THE PELLET DUMP DOOR



Slide the stainless steel door into the door slot. **ALWAYS** make sure the door is shut before filling the hopper with pellets and while the grill is on.

## 12 INSTALL THE SIDE SHELF

Line up the bullets with the pins on the side of the grill and slide to the right. Lift up the side tray support, underneath the side tray, and push the side tray down to snap it into place. Fasten the nuts on the hanger hooks to lock them in place.

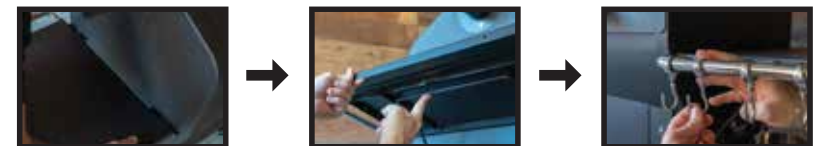

## 13 INSTALL THE DRIP BUCKET



Hang the bucket properly on the slot of the drip spout underneath the side tray.

# PREFIRE CHECK



## PRIMING THE FIREBOX




**IMPORTANT:** Make sure to pour the contents of the Ziploc bag into the firebox and fill your hopper with pellets. Priming only needs to be done the first time running the unit or if the unit runs out of pellets. See page 40 for an alternative way to prime the firebox if grill has run out of pellets throughout a cook.



## RECOMMENDED INSTALLATION OF THE HEAT SHIELD




**Daniel Boone**  
Approx. 4.25" from the left wall

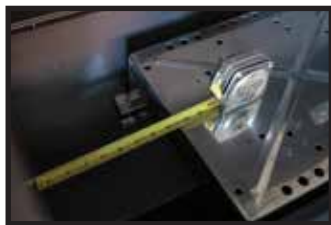



**Jim Bowie**  
Approx. 9.25" from the left wall



 Use the measurement on the heat shield adjustment rod as a guide. The grill wall should be even with 0" for optimal heat distribution.



## RECOMMENDED INSTALLATION OF THE GREASE TRAY

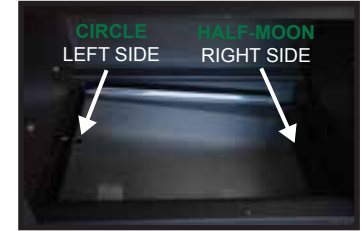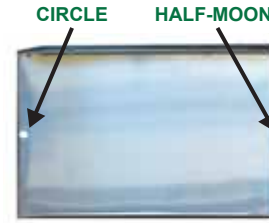

**IMPORTANT:** Install the grease tray with the hole to the left and half-moon crescent to the right. This ensures proper travel of grease into your grease trough. For easy cleanup, feel free to wrap the grease tray in tin foil. **MAKE SURE** not to cover up the circle on the left side near the thermal sensor.



## RECOMMENDED INSTALLATION OF THE CHIMNEY CAP



**ALWAYS MAKE SURE THE CHIMNEY CAP IS OPEN.** Your grill needs to draft. Always make sure there is at least a two-finger or 1.5-inch opening.



## CLOSE DOORS & LIDS FOR PROPER AIRFLOW



Pellet Dump



AshVac




Hopper Lid

**IMPORTANT:** Always close the pellet dump, AshVac, hopper lid, and grill lid before starting the grill.

# OPERATION



## PLUGGING IN THE GRILL

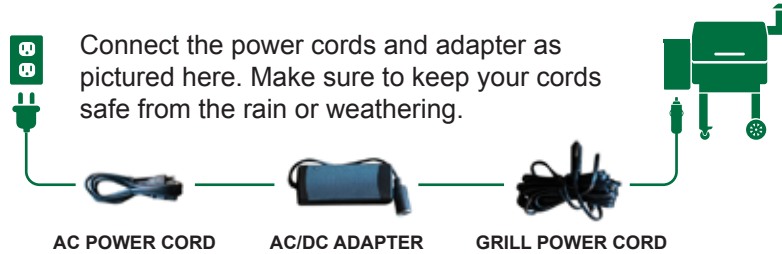

Connect the power cords and adapter as pictured here. Make sure to keep your cords safe from the rain or weathering.

AC POWER CORD

AC/DC ADAPTER

GRILL POWER CORD



## UNDERSTANDING THE

## 0-1-2-3 STARUP CYCLE

For more detailed startup cycle information, see page 64.



 
Auger turns on and starts pushing pellets into the firebox.




Igniter turns on and starts to heat the pellets.



The combustion fan turns on to ignite the pellets.



 The fan and igniter establish proof of fire.




## RECOMMENDED STEPS FOR FIRST STARTUP

This procedure is a way to ensure the auger feeds pellets and primes the firebox. **ONLY** perform these steps on the very first startup or to fill the auger and recharge the firebox if the grill runs out of pellets during a cook.


- 1 Once the grill is plugged in, the display will read off. Press the red power button to turn the unit on so it reads 0.



- 2 Once the unit hits number 1 on the screen, unplug the unit from the back and plug it in again. The unit should read off on the screen.

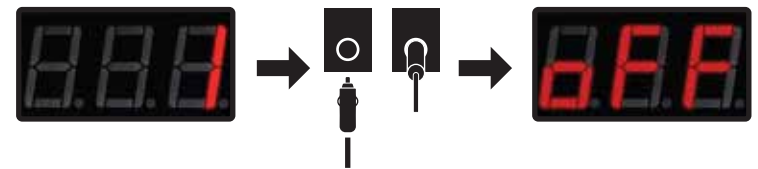

- 3 Now press the red power button again to restart the grill. The unit will go through the 0-1-2-3 process and will heat up to 150°F.

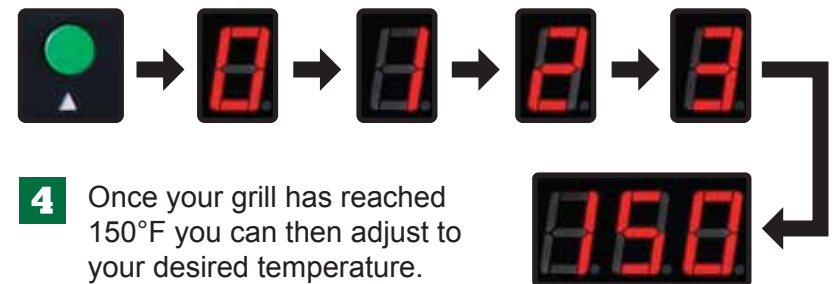

- 4 Once your grill has reached 150°F you can then adjust to your desired temperature.



## IMPORTANT TIPS FOR INITIAL BURN

Burn in the grill at 350°F for 30 minutes to remove any residue from the manufacturing process.

 30 mins  350°F



**ALWAYS** allow the grill to reach 150°F before adjusting the temperature.



## STANDARD STARTUP

**IMPORTANT:** For first startup please see the previous page.

- 1 Plug in the grill. The display should read off. Press the red power button to turn the unit on. The unit will go through the 0-1-2-3 process and will heat up to 150°F. **ALWAYS** allow the grill to reach 150°F before adjusting to your desired temperature.



## THE GRILL WILL MAKE ODD SOUNDS



Huffing noises are normal. The combustion fan, inside the hopper, will turn off and on regularly to provide the correct amount of oxygen to the fire to maintain the set temperature.



## HOW TO CORRECTLY POWER DOWN



Press the red power button to switch the grill into fan mode. Do not unplug the grill until it has completed fan mode and the display reads off.



Fan mode is important as it not only cools down the grill properly but also blows ash out of the firebox for your next cook.



## RECOMMENDED REGULAR **GRILL CLEANING**



Keep the inside of the grill clean using a shop vacuum. This will take only a few minutes.

**ABOUT EVERY 2-3 BAGS**  
80-100 LBS

**DO NOT DO THIS UNTIL THE GRILL AND ALL ASHES IN THE FIREBOX ARE STONE COLD!**

Remove the interior parts. Vacuum any ash and residue out of the base and the firebox.



### **AshVac**

Use this method to easily clean out the firebox without removing any internal parts.

**ALWAYS ENSURE THAT THE GRILL IS COLD AND THE FIRE IS OUT. WAIT AT LEAST ONE HOUR AFTER TURNING OFF THE GRILL BEFORE USING THE ASHVAC.**

Open the AshVac door located on the right side of the grill. Place the end of the vacuum hose over the hole of the clean-out tube that runs into the base of the burn pot. This will remove most of the excess ash from the firebox.



## UNDERSTANDING **AIR TEMPERATURE**

The PT200 Platinum Sensor sends data to the computer. This “brain” analyzes the data and adjusts the airflow and pellet fuel flow to maintain the set temperature. Many things affect the data gathered by the sensor—opening the lid, wind, grease splatter, humidity, altitude, and gravity (if the grill is not on level ground).

The computer analyzes all the erratic information and averages it over time. Then, it displays the best result as the most accurate representation of the grill’s current temperature. This is why an instantaneous air temperature reading from a third-party product does not provide much useful information.

— — — — —  
DAVY CROCKETT



# GET TO KNOW YOUR WOOD PELLET GRILL



- 1** Thermal Sensor
- 2** Pellet Hopper
- 3** Digital Controller
- 4** Auger
- 5** Combustion Fan
- 6** Grease Tray
- 7** Heat Shield
- 8** Igniter
- 9** Firebox
- 10** EZ-Fold & Carry Legs
- 11** Drip System
- 12** Chimney

# DIGITAL CONTROLLER



- 1** **Digital Readout Display**  
Displays temperature and status codes:  
  - OFF - Grill is off
  - FAN - Fan Mode
  - UPD - Updated
  - NFD - No Food Detected
  - FAL - Ignition Failure
  - SEN - Thermal Sensor Issue
  - OUL - Electrical Short
  - EO1 - Fan Motor Overload
  - EO2 - Auger Motor Overload
  - E04 - Igniter Overload
  - E08 - Low Voltage
- 2** **Signal Indicator Light**
- 3** **Antenna Connection**
- 4** **Temperature Up**
- 5** **Food Temperature**
- 6** **Temperature Down**
- 7** **Power Switch**
- 8** **Food Probe Connection**

# KEY GRILL COMPONENTS



**Firebox:** This sits at the bottom of the grill, and pellets arrive into it via an auger tube attached to its left side. This is also called a burn pot.



**Igniter:** You will find the igniter in the firebox. It should protrude about 1.5–2” into the firebox. You can adjust this by loosening the set screw located at the left side of the firebox on the igniter tube. However, this should rarely be necessary. This is also called a hot rod.




**Combustion Fan:** This fan is located under the hopper and blows air into the firebox (burn pot). The speed of this fan will vary during normal operation.



**Thermal Sensor:** This device sends data to the computer ten times per second. The computer then averages these readings over slightly longer periods of time and adjusts the air and pellet flow to maintain an accurate temperature in the cavity.



**Grease tray:** This slopes downhill from left to right and carries the drippings from your food into the grease bucket for easy disposal. **Make sure the half-moon cutout is on the LEFT SIDE.**

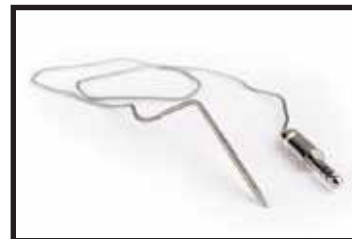

**Meat Probe:** To use this feature, just plug the connector into the receptacle on the front of the control panel.

Lift the stainless flap on the left side of the grill and push the probe through the hole. Then, insert the probe into the center of the food you are cooking. When you press the FOOD button on the control panel, it will display the temperature of whatever the probe touches, but this process takes a minute or two to stabilize.

To return to the grill temperature display, simply press the FOOD button again.

If you do not have the probe installed in the control panel, then your digital display will read “NFD” (no food) when you press the FOOD button.

The probe is not suitable for reading temperatures above 257°F (150°C).



**Hopper Lid:** Keep the hopper lid closed at all times while your grill is on. Obviously, if you need to refill the hopper, you can make a brief exception. The fan inside the hopper must blow air into the auger tube to prevent burn-back from the firepot. If the hopper lid stays open, this air pressure just escapes into the atmosphere.



**Controller:** Your controller is a state-of-the-art PID (calculus-based) computer that will keep your grill at a reasonably steady temperature.



**Chimney Cap:** Always leave the cap open. Your grill needs to draft.

# ASSEMBLY



Many of our dealers preassemble the grills, so this section will not apply to you in that case.

If you bought your grill unassembled, then you may use this manual to help you put your grill together. Or if you're a visual learner check out our Assembly & Setup section on our videos page:

[www.greenmountaingrills.com/videos](http://www.greenmountaingrills.com/videos)



**TOOLS NEEDED:**  
10 mm wrench or socket

## 4 STEP ASSEMBLY

- 1** INSTALL THE LEGS
- 2** INSTALL THE CHIMNEY
- 3** REVERSE THE HANDLE
- 4** INSERT THE PARTS

## 1 INSTALL THE LEGS



Always use two people, one on each end, to fold open or close the legs. This is not a one-person job. If you plan to leave the grill more or less permanently placed on a table, then you might find it more convenient just to remove the legs.

## 2 INSTALL THE CHIMNEY



Bolt the chimney into position. Make sure the rain cap is always wide open when cooking.

## 3 REVERSE THE HANDLE



Reverse the handle so it attaches outside the lid of the grill. Make sure the thermal isolation washers go between the metal trim ring and the lid on the outside, and between the washer and lid on the inside.

## 4 INSERT THE PARTS



**Important:** Pour the contents of the Ziploc bag into the firebox before you install the rest of the parts. This is part of the initial starting procedure.



**Important:** Make sure to fill the hopper with pellets as well before starting your grill.



**Heat Shield:** The slots go in the front and rear to match the metal strips inside the grill which hold it in place. See Quick Start Guide for proper alignment.



**Recommended Installation:** Approx. 4" from the inside left wall.



### IMPORTANT

**Grease tray:** Install the grease tray with the half-moon cutout to the left.



**Grates:** Insert the grates as pictured.



Hang the grease pail on the right side of the grill.

# PREFIRE CHECK



## PRIMING YOUR FIREBOX



### IMPORTANT

Make sure to pour the contents of the Ziploc bag into the firebox and fill your hopper with pellets. Priming only needs to be done the first time running the unit or if the unit runs out of pellets.

See page 59 for an alternative way to prime the firebox if grill has run out of pellets throughout a cook.



## RECOMMENDED INSTALLATION OF THE HEAT SHIELD



**Davy Crockett**  
Approx. 4" from the inside left wall.



## RECOMMENDED INSTALLATION OF THE GREASE TRAY



Install the grease tray correctly according to the picture, before grilling. This ensures proper travel of grease into your grease trough and down into your grease bucket. For easy cleanup, feel free to wrap the grease tray in tin foil. **MAKE SURE** not to cover up the half-moon cut out on the left side near the thermal sensor.



## RECOMMENDED INSTALLATION OF THE CHIMNEY CAP



It is imperative that your chimney cap is open. A fire needs oxygen to burn hot and efficiently.

**ALWAYS** make sure your lid is open when grilling.

# OPERATION

## 3 POWER OPTIONS



PLUGGING IN YOUR  
**GRILL**



**ALWAYS** make sure to keep your cords safe from the rain or weathering.


### 1 VEHICLE

Plug one end of the vehicle adapter (A) into the back of the grill and the other into a vehicle's lighter/cell phone connector.



### 2 BATTERY

Connect A and B, and plug the adapter end into the back of the grill and connect the alligator clips to a 12-volt battery (red to positive, black to negative).

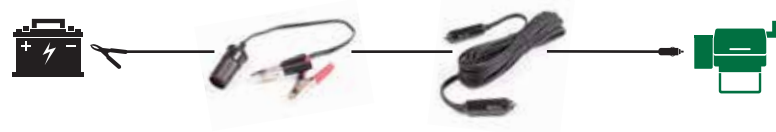

### 3 WALL OUTLET

Plug C into D and A into D and plug C into a 110-volt wall outlet and the adapter (A) into the back of the grill.



## UNDERSTANDING THE 0-1-2-3 STARUP CYCLE

For more detailed startup cycle information, see page 64.



 
Auger turns on and starts pushing pellets into the firebox.




Igniter turns on and starts to heat the pellets.



The combustion fan turns on to ignite the pellets.



 The fan and igniter establish proof of fire.'




## RECOMMENDED STEPS FOR **FIRST STARTUP**

This procedure is a way to ensure the auger feeds pellets and primes the firebox. **ONLY** perform these steps on the very first startup or to fill the auger and recharge the firebox if the grill runs out of pellets during a cook.


- 1 Once the grill is plugged in, the display will read off. Press the red power button to turn the unit on so it reads 0.



- 2 Once the unit hits number 1 on the screen, unplug the unit from the back and plug it in again. The unit should read “off” on the screen.

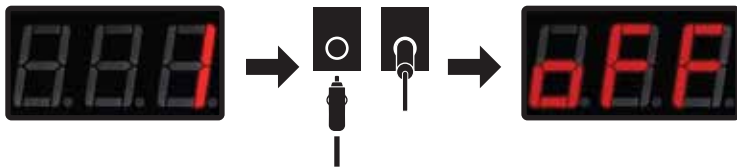

- 3 Now press the red power button again to restart the grill. The unit will go through the 0-1-2-3 process and will heat up to 150°F.

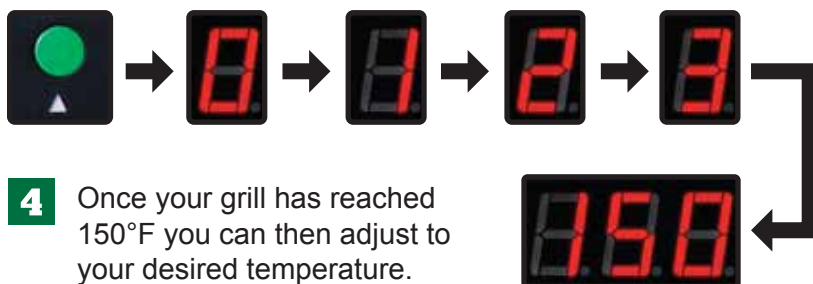

- 4 Once your grill has reached 150°F you can then adjust to your desired temperature.

## IMPORTANT TIPS FOR **INITIAL BURN**

Burn in the grill at 350°F for 30 minutes to remove any residue from the manufacturing process.

 **30 mins**  **350°F**



**ALWAYS** allow the grill to reach 150°F before adjusting temperatures up.

## STANDARD **STARTUP**

**IMPORTANT:** For first startup please see the previous page.

- 1 Plug in the grill. The display should read off. Press the red power button to turn the unit on. The unit will go through the 0-1-2-3 process and will heat up to 150°F.

**ALWAYS** allow the grill to reach 150°F before adjusting to your desired temperature.



## THE GRILL WILL MAKE **ODD SOUNDS**



Huffing noises are normal. The combustion fan, inside the hopper, will turn off and on regularly to provide the correct amount of oxygen to the fire to maintain the set temperature.

## HOW TO CORRECTLY **POWER DOWN**



Press the red power button to switch the grill into fan mode. Do not unplug the grill until it has completed fan mode and the display reads “off.”



Fan mode is important as it not only cools down the grill properly but also blows ash out of the firebox for your next cook.

## RECOMMENDED REGULAR **GRILL CLEANING**



**ABOUT EVERY**  
**2-3 BAGS**  
80-100 LBS

A good cleaning can go a long way every once in awhile. A Shop-Vac will do the trick.

**ALWAYS** make sure the grill is cool. Remove the grates, grease trays, and heat shield. Now vacuum accordingly including the base of the grill chamber and firebox. Cleaning should take 10 minutes tops.

## UNDERSTANDING **AIR TEMPERATURE**

The PT100 Platinum Sensor sends data to the computer. This ‘brain’ analyzes the data and adjusts the airflow and pellet fuel flow to maintain the set temperature. Many things affect the data gathered by the sensor - opening the lid, wind, grease splatter, humidity, altitude, and gravity (if the grill is not on level ground).

The computer analyzes all the erratic information and averages it over time. Then, it displays the best result as the most accurate representation of the grill’s current temperature. This is why an instantaneous air temperature reading from a third-party product does not provide much useful information.

# GENERAL OPERATING TIPS



- **Setting the Temperature:** Do not push any buttons until the computer finishes the 0-1-2-3 cycles and automatically goes to 150°F (66°C). Once it reaches 150°F (66°C), you can change to your desired setting.
- **Time to Reach Temperature:** It should take about 15–20 minutes from the time you first turn the grill on until it achieves the temperature you set. Make sure not to adjust the temperature until it reaches 150°F first. Time to heat up will vary based on the temperature of the climate you live in.
- **Temperature Control:** You can set the grill as low as 150°F or as high as 550°F.
- **Grill Ready:** Wait until the grill heats up before cooking. Aside from the soot contained in earlier smokes, the grill will not cook evenly until it gets hot, just as with a charcoal or gas grill. A slowly blinking light on the digital control panel indicates that the grill has achieved the target temperature, while no light means the grill is still heating or cooling.
- **Heat Distribution:** If you are experiencing larger left-to-right temperature discrepancies, the heat shield can be moved along the belly of the grill left or right to assist with these differences. See our recommended Heat Shield installation in the Quick Start Guide section.

The grill temperature will climb fairly rapidly. The temperature, however, falls much more slowly. This is because the fire must be kept going at all costs, which results in a fairly slow fall in inside temperature. Here, too, you can speed the process by opening the lid to let excess heat escape.

- **Controller Functions:** In case you have an interest in controller functions, the chart below shows each ignition state and its function.

DANIEL BOONE & JIM BOWIE				
DISPLAY	TIME	AUGER	IGNITER	FAN
0	45 sec.	X		
1	90 sec.		X	
2	30 sec.		X	X
3	30 sec.		X	X

DAVY CROCKETT				
DISPLAY	TIME	AUGER	IGNITER	FAN
0	60 sec.	X		
1	90 sec.		X	
2	30 sec.		X	X
3	30 sec.		X	X

During Cycle 0, the controller feeds the right amount of pellets into the firebox. Cycle 1 turns on the igniter. At cycle 2 the fan turns on, and remains on with the igniter for combustion.

## DO NOT INCREASE TEMPERATURE YET.

The grill needs to make P.O.F (Proof of Fire) which is 5 degrees above ambient temperature. At that point the board will turn the igniter off and start the auger motor to guide the grill up to 150°F. It is imperative for the grill lid to be closed for this to happen.

## ONCE THE GRILL HAS REACHED 150°F, YOU MAY INCREASE TO YOUR DESIRED TEMPERATURE.

If there is not a 5° increase within 20 minutes the grill will display FAL. At this point see page 78 of the troubleshooting section.



- **Temperature Variances:** The temperature on the digital readout reflects the temperature at the grilling surface on the left side of the grate where the thermal sensor protrudes into the grill cavity. You may notice differences between the dome thermometer and the digital readout, depending on the quantity of cold food inside the grill or how often you open and close the lid or how much wind is present. This is normal.

Please understand that if you cook, for instance, a stand-up chicken, the temperature at the top of the cavity may be somewhat less than at the grilling surface in the winter and perhaps higher in the summer. You might have decided to cook the chicken at 275°F, but you notice that the temp on the dome thermometer (if your grill has one) only reads 250°F. Since most of your chicken is well above the cooking surface, you may want to adjust the digital temp of the grilling surface up to about 300°F to achieve your target cooking temperature of 275°F at the chicken level or vice-versa if the dome thermometer reads higher.

- **Weather:** You will likely want to keep your grill out of rain and snow when not in use. In a heavy driving rain, water can invade the auger tube that will then magically change pellets to sawdust and then expand and dry into something akin to concrete. This makes for an unpleasant repair. Melting snow can also cause the same problem. A grill cover will clearly help the situation, but the garage seems more foolproof.
- **Grilling in Various Temperatures:** Because we know that you will use the grill in a variety of weather conditions, we tend to overshoot the initial default temperature of 150°F by 20–25 degrees on warm days. We do this so that it does not take interminably long on a cold day to reach its target temperature. The grill will eventually cool back down to 150°F on its own, or you may speed the process by simply opening the lid to let out excess heat.

Once your outside temperatures drop below 35°F (2°C), the Turbo mode kicks in to accelerate the volume of pellets and air so that you do not have to wait so long for the grill to heat up as you otherwise would without it.

- **Thermal Blanket:** Tests from users have indicated that you can reduce your pellet consumption by 40%–50% in very cold weather by using a GMG thermal blanket. If you grill regularly in cold weather, this investment will likely pay off handsomely. Do not use the thermal blanket in the summertime, as it provides no noticeable benefit and may actually work against you on very warm days.

- **Keep the Lid Closed When Cooking.** The grill cooks with convection heat, so an open lid only dissipates heat into the atmosphere. “If you’re lookin’, you’re not cookin’.”
- **Pellet Checking:** Be sure to keep pellets in the hopper! Check your hopper occasionally so that your grill does not go out in the middle of cooking your meal.
- **Pellet Storage:** Store your pellets in a cool, dry place. Do not allow them to get wet, as they will turn back into sawdust.
- **Bypass Mode for Hot Restarts:** Occasionally, you may experience a power outage while the grill is in use, or someone accidentally turns the grill off, or you undercook something and want to resume cooking for a little longer. Use this method if you still have some fire left in the firebox, which is usually no longer than about 6–7 minutes later. If you have run the fan mode for more than about 3–4 minutes, this will not work.

If necessary, make sure the grill is plugged in first. When the digital readout displays off, press the red power button to turn the grill back on. Once it is on, hold down the UP button for approximately 8 seconds, or until the digital readout displays a temperature.

Now adjust the temperature to your desired setting.

- **Powering Down:** Simply press the red power button and your grill will automatically go into fan mode. Allow fan mode to complete before disconnecting the grill.



# WOOD FIRED 101



- **Smoke Flavor:** You will get more smoke flavor at low temperatures than at high ones. If you wish to infuse a piece of meat with a smoky flavor, cook it at 150°–160°F for an hour or so before you turn up the grill to finish it off.
- **Let Meat Rest.** Beef, pork, poultry, and fish will generally continue to cook after you remove them from the grill as the hot outer part of the meat influences the cooler interior. While it seems possible to eat immediately upon finishing your grilling, that seldom works out as a practical matter. Plan for the internal temperature to rise about 5 degrees after you take it off the grill. Also, resting allows the juices to redistribute more evenly throughout the meat.
- **Spritz!** GMG sells a very nice stainless steel spritz bottle for about \$10. You will use it on the meats you're cooking regularly. Pork butts and picnic roasts, steaks, burgers, chops, and ribs will all benefit from regular, generous spritzing. A good staple mixture is apple juice plus 2–3 tablespoons of Worcestershire.
- **Be Creative!** You can cook almost anything on this grill. Try pizza, bread, marinated vegetables, casseroles, and corn bread, as well as steaks, roasts, hams, pork chops or tenderloins, wild game, fish, and poultry. Cook anything outside in this appliance that you would cook in your kitchen oven.

- **Low Temperature Smoking:** For anything you plan to smoke for several hours, we recommend marinating it in sugar or salt or both, in the refrigerator for several hours beforehand. This will normally cure the meat and should make it safe. We do not recommend smoking poultry below 185°F for health reasons. Cooking it at or above that temperature will still impart a rich, smoky flavor.
- **General Cooking Guide.** If you're new to pellet grilling, this will help you to get started. These are basic guidelines and temps/times can vary depending on the size of what you're cooking, the initial temperature of the food when you put it in, how often you open the lid, and other variables. **ALWAYS COOK MEAT TO A SAFE INTERNAL TEMPERATURE. RECIPES ARE ONLY GUIDELINES.**

Food	Method	Temperature	Time*
Brats	Grill	450-500	5-10 min./side
Brisket	Slow-cook	225-240-	6-10 hours
Burgers	Grill	450-500	7-10 min./side
Chicken pieces	Grill	375-425	15-20 min./side
Chicken - whole	Roast	275-325	1.5-2.5 hours
Fish	Grill	375-425	7-20 min./side
Hot Dogs	Grill	450-500	5-7 Min./side
Jerky	Smoke	150-170	4-6 hours
Pizza	Bake	400-450	14-18 minutes
Pork Butts/Picnics	Slow-cook	225-240	8-16 hours
Ribs	Roast	200-250	4-8 hours
Roast Beef	Roast	250-300	1.5-3.5 hours
Salmon - smoked	Smoke	150-175	6-10 hours
Steaks	Grill	450-500	6-10 min./side

- **GMG Recipes:** Please check the Recipes section at the back of this manual for great recipes or on our site:


[www.greenmountaingrills.com/recipes](http://www.greenmountaingrills.com/recipes)

# Food Temperature Guide

For ratings and reviews of scores of accurate, inexpensive digital thermometers, visit <http://AmazingRibs.com/thermometers>



<b>Beef, Lamb, Venison, Duck Breasts (Steaks, Chops, Roasts)</b>		<b>USDA Minimum 145°F (63°C)</b>
Blue, "Pittsburgh"	110-120°F (43-49°C)	Dark purple, cool, stringy, slippery, slightly juicy
Rare	120-130°F (49-54°C)	Bright purple to red, warm, tender, juicy
<b>CHEF TEMP Medium Rare</b>	<b>130-135°F (54-57°C)</b>	Bright red, warm, tender, very juicy
Medium	135-145°F (57-63°C)	Rich pink, yielding, juicy
Medium Well	145-155°F (63-68°C)	Tan with slight pink, firm, slightly fibrous, slightly juicy
Well Done	155°F (68°C) or more	Tan to brown, no pink, chewy, dry
<b>Pork, Raw Hams, Veal (Steaks, Chops, Roasts)</b>		<b>USDA Minimum 145°F (63°C)</b>
Rare	120-130°F (49-54°C)	Pale pink center, warm, tender, slightly juicy
Medium Rare	130-135°F (54-57°C)	Creamy pink color, tender, very juicy
<b>CHEF TEMP Medium</b>	<b>135-145°F (57-63°C)</b>	Cream color, some pink, yielding, juicy
Medium Well	145-155°F (63-68°C)	Cream color, firm, slightly juicy
Well Done	155°F (68°C) or more	Cream color, tough, dry
<b>Pork Ribs, Pork Shoulders, Beef Briskets, Beef Ribs</b>		<b>USDA Minimum 145°F (63°C)</b>
<b>CHEF TEMP Tender, Tugs Apart</b>	<b>203°F (95°C)</b>	High in fat and collagen, best cooked low and slow
<b>Chicken, Turkey (Whole Or Ground), Including Stuffing</b>		<b>USDA Minimum 165°F (74°C)</b>
<b>CHEF TEMP Well Done</b>	<b>160°F (71°C)</b>	Cream color white meat, pale tan dark meat
<b>Ground Meats, Burgers, Sausages, Meat Loaf (Except Poultry)</b>		<b>USDA Minimum 160°F (71°C)</b>
Cook these risky meats to USDA minimum and make them juicy by using a 20% fat blend		
<b>Fish (Except Tuna Steaks)</b>		<b>USDA Minimum 145°F (63°C)</b>
<b>CHEF TEMP Medium</b>	<b>130-145°F (54-63°C)</b>	Slightly translucent, flaky, tender
<b>Tuna Steaks</b>		<b>USDA Minimum 145°F (63°C)</b>
<b>CHEF TEMP Rare</b>	<b>120-125°F (49-52°C)</b>	Bright red

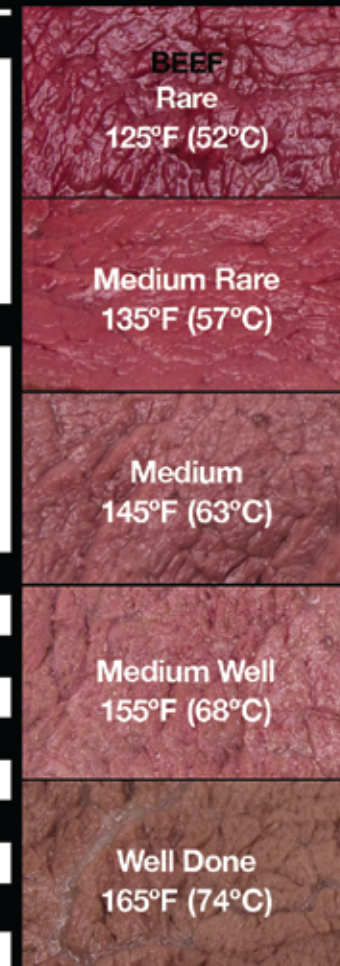

# CLEANING & MAINTENANCE



- **ALWAYS** unplug your grill before performing any cleaning, maintenance, and/or operations involving any of the electrical components
- **Clean the grates and grease tray regularly.** You can use a wire brush to clean the stainless steel grates. Alternatively, you can use an old camper's trick of wadding a piece of aluminum foil and rubbing it lightly on the grates to clean it.
- **Grease fire caution!** As with any barbecue, the potential for a grease fire exists. To reduce this possibility, regularly clean the grease tray to prevent flammable buildup. An easy way to do this is to line the tray with aluminum foil or use our grease tray liners. Use multiple sheets on the tray and then just peel one off each time you cook. If you are going to line your tray with aluminum foil, make sure it is at least a few inches away from the thermal sensor on the left.
- **Clean the chimney cap.** Wipe down the underside of the cap regularly to prevent grease drip.
- **Clean the drip system.** Make sure the trough where grease drains into the discharge spout is clean and free of debris.
- **Place grill on level ground.** The grill should be kept as level as possible so that the grease flows into the trough and out into the bucket and also to insure that the sensor reads evenly, as hot air displaced to one side or the other will cause irregular operation.

- **Clean ash out of the firebox periodically.** The best way to do this is with a Shop-Vac. You should expect to clean this out about every 2–3 bags of pellets. If ash covers the igniter, the grill may not light. When you clean out the ash from your firepot, it is not necessary to add in more pellets afterwards. The auger will add in the correct amount of pellets in the start-up cycle.
- **Regularly clean the inside of your grill.** Remove grease with hot, soapy water or a grill cleaner. Keep liquids away from the auger tube and the pellets. Liquids will drain through the bottom hole. Alternatively, just turn the grill on at 500°F for an hour or more to bake off most internal residues.
- **Clean the grill lid window.** The window will discolor over time. The best way to clean the window is with steel wool.
- **Protect your grill.** Use a grill cover as much as possible. Water may be able to get in through the hopper in wet conditions. Make sure to check for wet pellets if your grill gets left out in the rain. As stated, pellets and water do not mix. Your hopper will, for the most part, stay dry in most weather, but a driving rain may cause adverse results.
- **Service?** Answers to most common questions can be found on our website. You may also contact our technical support department at 530-347-9167 opt. 1.

While you will hopefully have no problems, machinery can fail. Fortunately, each part on the grill is modular, so you can easily replace one if necessary.



# TROUBLESHOOTING

**! Grill doesn't turn on when you press the power button.**

**✓** Check to make sure the power cord is plugged in. When the AC adapter is plugged into the wall, check that the light on the adapter comes on.

Inspect both ends of the male-to-male power cord to ensure the connections aren't compromised.

Check the circuit breaker and/or GFCI on the circuit the adapter is plugged into. Plug a small appliance into the same outlet to see if you have electricity.

Unplug the grill. Remove the control panel. Check for loose wires connected to the wiring harness. Disconnect and reconnect the wiring harness to ensure a secure connection.

**! Grill doesn't come up to temperature.**


**✓** **If grill remains at ambient temperature...** Check the firebox to see if it has overflowed with pellets. If it has, clean it out and start over. This overflow can result from turning the grill off without using the fan mode or from charging the firebox when it does not need to be charged. Reread the section on "Priming the Firebox" to understand that. You only need to prime the firebox the first time you use the grill or on any subsequent occasions when it runs out of pellets and the auger runs until empty.

**✓** **If grill lights, but does not reach set temperature...** Check the combustion fan to ensure it spins freely and there is no damage to the blades.

Ensure the heat shield is properly installed.



**Jim Bowie**  
9.25" From left wall

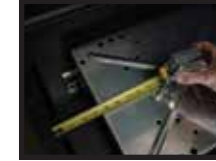

**Daniel Boone**  
4.25" From left wall



**Davy Crockett**  
4" From left wall

Improper shield placement will result in issues coming to temperature. When using the heat shield adjustment rod, a centered heat shield should be positioned approximately at the "0" mark on the rod. The depth to which the rod is threaded into the receiving nut varies, so some experimenting might be needed to find the perfectly adjusted "0" point on your rod.

Ensure the grease tray is installed correctly.



**Jim Bowie & Daniel Boone**



**Davy Crockett**

**! Erratic temperature.**

**✓** If the digital display reads "SEN" or shows rapid fluctuation in temperature (faster than the grill could realistically increase/decrease its internal temperature) call our technical support 530-347-9167 opt. 1.

Otherwise, check to make sure you do not have aluminum foil on the grease tray that is blocking the thermal sensor. It is okay to wrap your tray in foil. However it must be wrapped tight to the metal, and the hole as well as the half-moon cutout must be punched out of the foil to ensure proper airflow.

A simple way to check the thermal sensor is to look at the initial temperature reading the grill gives after the 0-1-2-3 start-up process. This temperature should be close to the ambient air temperature since the grill has not yet had a chance to heat up.

Improper shield placement will result in issues coming to temperature. When using the heat shield adjustment rod, a centered heat shield should be positioned approximately at the "0" mark on the rod. The depth to which the rod is threaded into the receiving nut varies, so some experimenting might be needed to find the perfectly adjusted "0" point on your rod.

Ensure the grease tray is installed correctly. See the previous page for proper installation.

 **Smoke is coming out of the hopper.**

 Make sure your burn pot is empty of ash and pellets.

Make sure the hopper lid stays closed when you have the grill on. Press firmly down on each of the corners of the lid to make certain it is closed tight. If a corner of the lid sits up even 1/8 inch while the lid is flat, a warped hopper lid is your issue.


You can test this by running 2 sheets of tin foil over your hopper then closing the lid down on top of the foil to make a temporary seal, hopefully preventing smoke from traveling through your hopper.

Ensure the combustion fan spins freely and is not damaged.

Ensure the pellet dump door is closed tight. Often, it doesn't get pushed all the way down and leaves a gap that lets out air pressure from the fan. If it is not slid down all the way, it can have the same effect as an open hopper lid.


If all else fails, the square gasket seal between the hopper and auger may be the culprit. You can seal with high-temp silicone.

 **Low pellet alarm beeps continuously.**

 Fill the hopper with pellets so that their level is above the low pellet sensor. If this does not solve the problem, unplug the grill then disconnect the alarm from and reconnect it to the back of the control panel. If the beeping persists, your alarm is broken and needs to be replaced. Contact our technical support 530-347-9167 opt. 1. In the meantime, you can stop the beeping by unplugging the low pellet alarm from the circuit board and leaving it disconnected.

*\*The low pellet alarm is not necessary for the grill's functionality. You can leave the alarm disconnected and continue cooking.*




 **No pellets in the firebox.**


Assuming that you've charged the firebox so that there are pellets in the auger tube, turn the grill on and press the power button to send the control to cycle 0. Examine the auger bit through the firebox to see if it's turning.

If it is and there aren't any pellets coming through, they are bridged up over the auger's intake. Turn the grill off, sift the pellets around inside the hopper, and put the grill back into cycle 0. Wait until the pellets emerge into the firebox. It may take up to 2 full cycle 0's to get pellets all the way through the auger tube. Once they emerge, turn the grill off and start it again all the way through the 0-1-2-3 cycles to fire it up.


It may take more if the auger is not turning. Listen for the auger motor. If the auger motor is engaged and the auger bit is not turning, then there is a broken linkage between the motor and the auger shaft. Call technical support on 530-347-9167, opt. 1.

 **I have uneven heating.**

Uneven heat can be corrected by making small adjustments to your heat shield placement. Try sliding the shield toward the hot side in ¼ inch increments while taking note of the temperature changes. Using the Heat shield adjustment rod, a centered heat shield should be positioned approximately at the "0" mark on the rod. The depth to which the rod is threaded into the receiving nut varies, so some experimenting might be needed to find the perfectly adjusted "0" point on your rod. Once you find the best heat shield placement, we encourage you to mark that distance on the heat shield adjustment rod. That way, you can subsequently repeat the positioning whenever the grill is relocated or the burn pot is cleared internally.

 **Loud clicking sound when the auger is running.**

This is typically the sound of a stripped/slipping gear within the auger's gearbox. Auger assembly replacement will be needed.

 **Grill didn't light (FAL message).**

There may be too much ash in the firebox. Wait until it cools off, and clean out the ash. Alternatively, pellets may have overfilled the firebox. Never turn the grill off and on repeatedly as this will overfill the firebox with pellets. Each time the grill displays "0" on start-up, it feeds a full load of pellets into the burn pot. The igniter won't light the pellets unless air can flow freely through the combustion chamber.

The combustion fan may not have been operating. Check to make sure that the fan blades turn freely and the fan runs on cycles 2 and 3 of the 0-1-2-3 sequence.

The auger might not have turned pellets into the burn pot. Refer to "No pellets in the firebox" above.

If there isn't any ash or pellet buildup, the fan works properly, and fresh pellets are feeding in, your igniter is most likely out and the grill will require a replacement.

*\*The grill can be manually lit if the igniter is out. Charge the burn pot with a handful of pellets, and light them with a propane torch or. Once the pellets are able to maintain a flame by themselves, plug the grill in so it displays "off." Hold the "power" button for 10 seconds. The grill will initially display "0" but then skip to a temperature reading while turning on the fan and auger. Let the grill come to 150 then select your grilling temperature like normal.*



### **Auger is jamming.**



Turn the grill into cycle 0 by pressing the “power” button (first stage of the normal start-up procedure), and listen for the auger motor. If the motor engages, look inside your burn pot toward the end of the auger bit to determine if the auger is spinning. If the auger is spinning but you don’t have pellets feeding into the burn pot, you have pellets bridged up over the intake of the auger tube. Turn the grill off, sift the pellets around inside the hopper, and put the grill back into cycle 0. Wait until the pellets emerge into the firebox. It may take up to 2 full cycle 0’s to get pellets all the way through the auger tube.

If you have determined that your auger does not turn when the auger motor is engaged, you can try to work the affected pellets through the auger tube to clear out the jam. Remove the grease tray and heat shield from the body of the grill. Remove all the pellets from the hopper and the firebox.

Once the auger tube is clear, you will need to refill it with fresh pellets by running cycle 0 a few more times after the hopper has been filled. Once you see fresh pellets coming out, turn off the grill and start it up again through the entire 0-1-2-3 process with the heat shield and grease tray installed.



### **Combustion fan doesn’t seem to be working properly.**



There’s no need for concern if your fan is not blowing at a constant speed. It will run at many RPMs in order to maintain the most stable temperature.

The fan should run continuously from cycle 2 on start-up until the grill completes the fan mode.

First, unplug the grill. Then, using your finger, flick the fan to make sure it spins freely and does not appear to have any visible damage. If there is any damage to the blades, your grill will require a new combustion fan.

Check the wires leading to the combustion fan to make sure those connections are secure and undamaged.



# SMART CONTROL

## APP USER GUIDE



### Learn how to:



- Connect to your grill through your local WiFi and the GMG server
- Control and monitor grill temps
- Create and manage food profiles

## INDEX

HOME SCREEN .....	83
WARNINGS .....	84
<b>CONNECTING TO THE GRILL</b>	
iOS .....	85
Android .....	86
Connecting to the Grill .....	87
Turning the Grill On/Off .....	88
Setting the Grill Temp .....	89
Setting the Food Probe Alert .....	90
Stopwatch .....	91
Timer .....	92
<b>CREATING PROFILES</b> .....	93
Creating Steps .....	94
Starting Profiles .....	97
Editing Profiles .....	98
Deleting Profiles .....	99
<b>RECIPES</b> .....	100
<b>SETTINGS</b> .....	101
App Support	
Grill Support	
<b>FIRMWARE VERSION CHECK</b> .....	102
<b>CONTROL BOARD RESET</b> .....	103
<b>UPDATING GRILL FIRMWARE</b> .....	104
<b>CONNECTING TO WiFi</b> .....	107
<b>SERVER MODE</b> .....	112
<b>MULTI-GRILL MODE</b> .....	116
<b>TECH SUPPORT</b> .....	118




Download the app by scanning the QR code, or search Green Mountain Grills in the iTunes App Store or on Google Play.

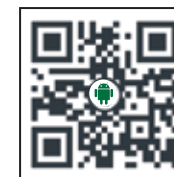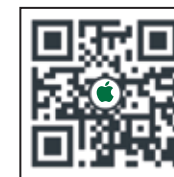



The Home screen shows your grilling parameters:

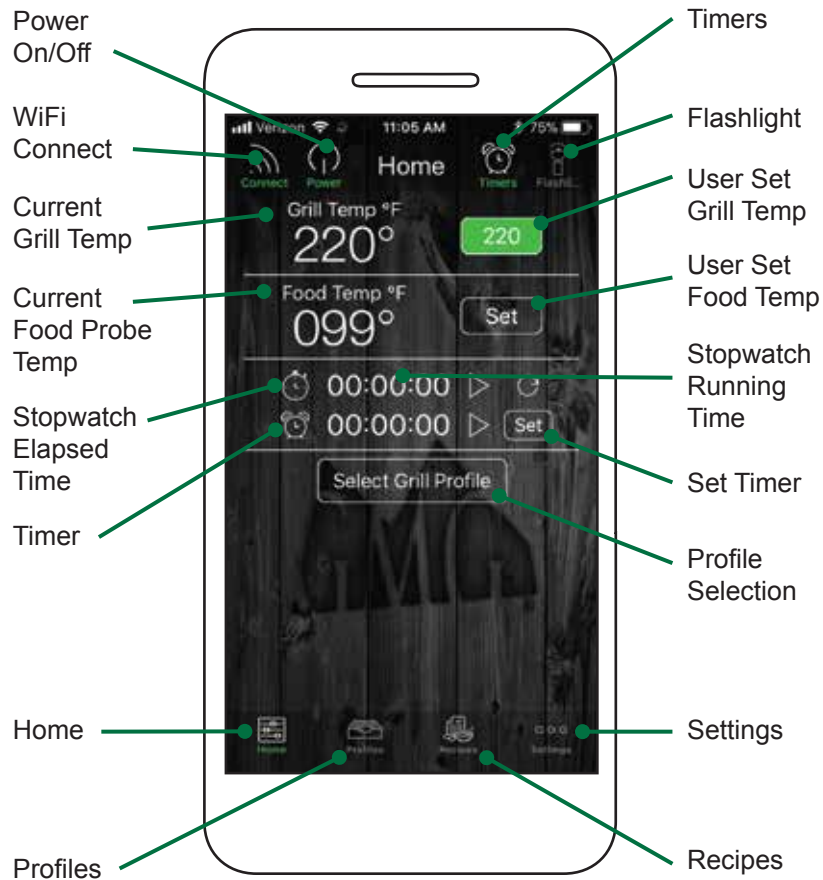

The control screen allows you to turn your grill on/off, set the grill temperature, set the food probe temperature, and set a timer or stopwatch.



## FREE CIRCUIT WARNING

There is an open circuit in your grill. Unplug from power source immediately.




## LOW FUEL WARNING

The low pellet alarm has been triggered. Please check the hopper.




## MOTOR WARNING

The auger motor is not working properly. Unplug from power source immediately.

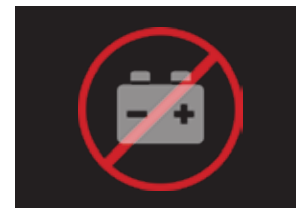

## BATTERY WARNING

Low voltage detected on the grill. Check power source.

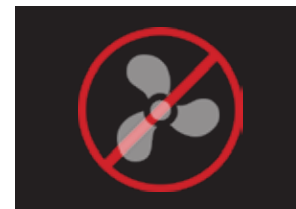

## FAN WARNING

One of the fans is not working properly. Discontinue use immediately.



Point-to-Point

## Locating your grill's WiFi password

Your WiFi password is your grill's serial number. The number is located on the green plate on the back of the grill. When entering the password, use only numbers, and ignore any letters.



Go to "Settings > WiFi" on your iPhone.



Click on WiFi (the second item down).



Make sure your WiFi is on.



When WiFi is enabled, a list of networks will be displayed.



Select the network that begins with "GMG\_".

Enter the password for your grill. Press Join.



It may take up to 1 minute to connect. Once connected, you will see a check mark.



Point-to-Point

## Locating your grill's WiFi password


Your WiFi password is your grill's serial number. The number is located on the green plate on the back of the grill. When entering the password, use only numbers, and ignore any letters.



Start the app. Wait for the WiFi pop-up, then press "WiFi Settings."



Make sure your WiFi is on.

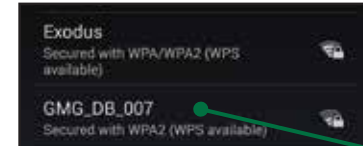


When WiFi is enabled, a list of networks will be displayed.





Select the network that begins with "GMG\_".

Enter the password for your grill. Press Connect.

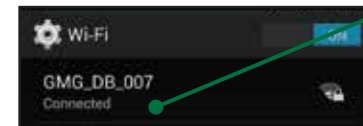

It may take up to 1 minute to connect. Once you are connected, a "Connected" message will appear below the network.

# Connecting to the Grill

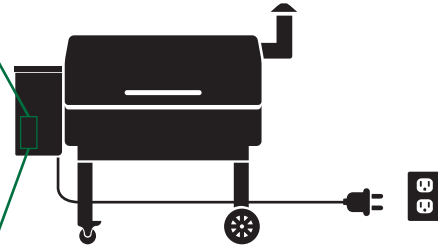 

**POWER:**  
First, confirm the grill is plugged in and the power switch (Daniel Boone and Jim Bowie) on the front of the grill is set to “on”.

Once the grill has power, connect your smartphone to the grill’s WiFi network, “GMG\_”.

Press the Connect button. The app will detect if there is a grill nearby.

**DISCONNECTING:**  
To disconnect the app from the grill, simply press the Connect button again.



Green Mountain Grills  
Connected. Happy Grilling!




# Turning the Grill On/Off



- ON:**
1. Make sure you're connected to the grill.
  2. Tap the Power button. A pop-up window will display.
  3. Press Confirm to turn the grill on. It will begin its 0-1-2-3 startup sequence.

**OFF:** To turn the grill off, tap the Power button, then press Confirm. The grill will cycle into fan mode.

**FAN MODE:** This will cool down the firebox. When it has reached a cool temp, the grill’s digital control board will read “off”.

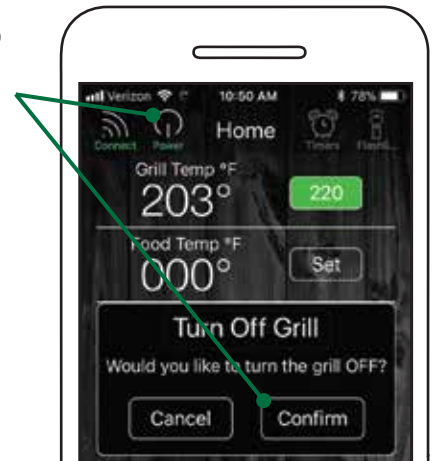

# Setting the Grill Temp °F

Allow your grill to reach 150°F (66°C) before setting your desired grill temp.


Press the Set button next to the grill temp.



Move the slider to the temp you want.

**Pro Tip** 👍 Tap the temperature digits for a more precise control.

Press Confirm. The grill will now adjust to the new set temp.

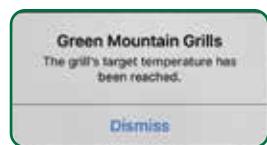

# Food Probe Alert

Track the internal temp of your food with the GMG Food Probe. The app will only work with one food probe at a time.


Set the food probe alert by pressing the Set button next to the food temp.



Move the slider to the desired temp for your food probe alert.

Press Confirm to set the alert.

The food probe alert will now trigger an audible alarm on the grill when the set temp of the food has been reached. If your device is connected, it will receive an alert notification. 🔊

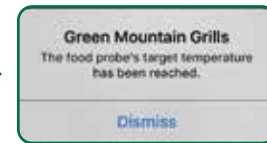


# Stopwatch



The stopwatch is found on the Home screen.

.....  
Activate the Timers icon in the top right of screen. This will drop down the stopwatch and timer controls.

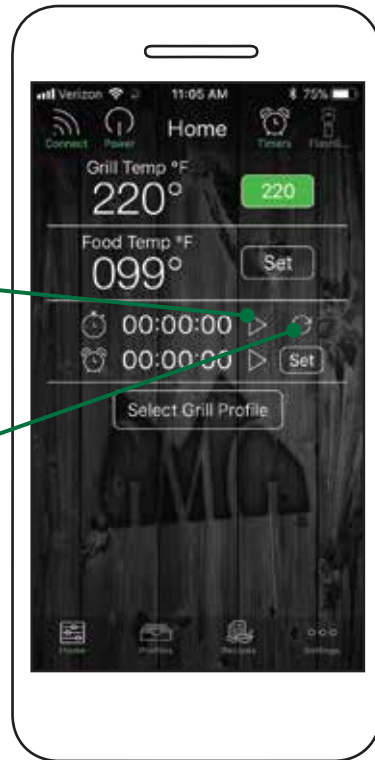

Start the stopwatch by pressing the Play icon.


.....  
To pause the stopwatch press the Pause icon.

.....  
To reset the stopwatch to 00:00:00, press the Reset icon.

.....  
**Pro Tip** 👍  
Experimenting with cooking times using the stopwatch can help you build food profiles.



# Timer

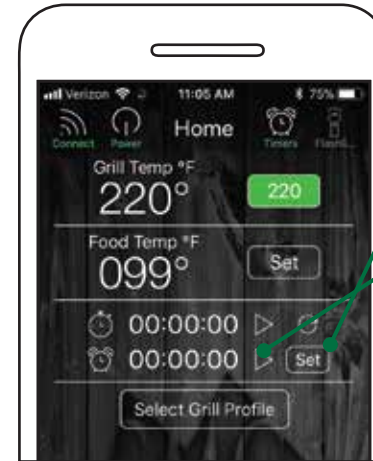

To set a timer, press the Set button next to the timer.

.....  
Tap the Play icon to start the timer.

.....  
To pause, press the Pause icon while the Timer is running.

A timer box will pop up. Select the hours and minutes. Tap Confirm to set the timer.

.....  
An alarm will sound when the timer runs out. 🔊



# Creating Profiles




Profiles allow you to create and use customizable and programmable cooking instructions to make grilling that much easier! Whether you are smoking ribs, slow-cooking a brisket or just grilling chicken breasts, profiles allow you to easily record and repeat your cook at the click of a button.

To create a new profile, tap the Profiles icon at the bottom of the Home screen.



Press the Create Profile button.

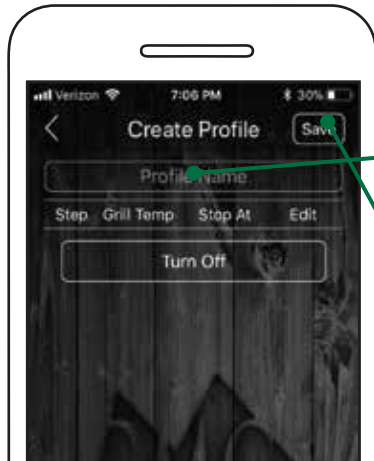

Choose Profile Name and enter a name for your profile.


Press the Save button.

- 1
- 2
- 3

# Creating Steps

Steps allow you to automate temperature changes in a profile. You can select between temperature and time-dependent steps. Temperature-dependent steps are dictated by the food probe. Time-dependent steps use time to dictate the process.

To add a new step press the Add Step button.

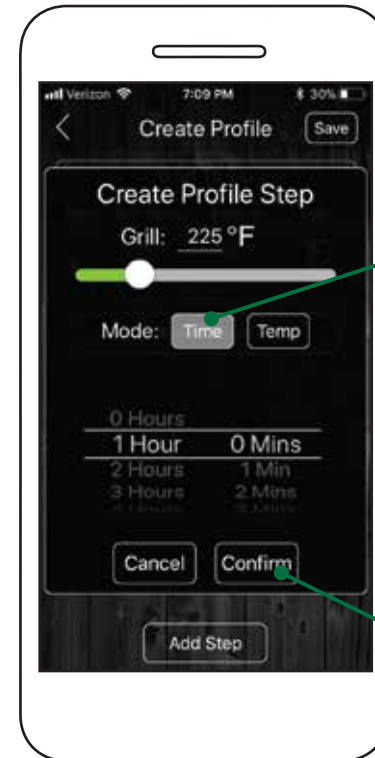

## TIME TRIGGERED:

Each step will maintain a temperature for a specified amount of time. When the selected time has run out, the next step in the profile will activate.

Press Confirm to save the new profile step.




## TEMP TRIGGERED:

Using your GMG food probe, you can trigger a profile step based on the internal temp of a food item.

When the food probe reaches the set temp, the next step in the profile will activate (i.e. increase or decrease the grill temp when internal temp is reached).


Press Confirm to save the new profile step.

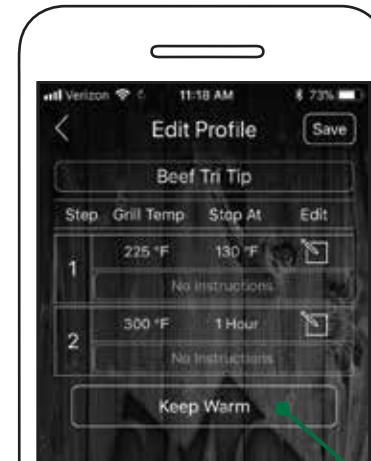

## END STEP:

For the end step, the grill will automatically display a Keep Warm setting or you can change it to Turn Off, which will switch the grill into fan mode.

To switch between the two settings simply tap the current button.

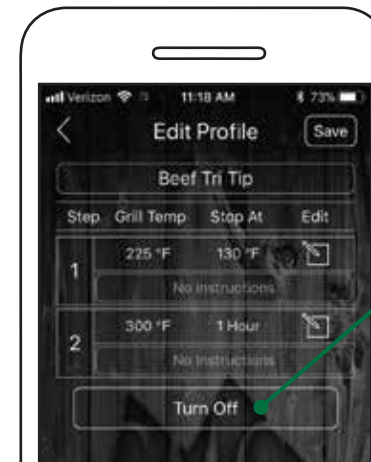

**Keep Warm:** This setting will set the grill temp to 150°F and stay there until the grill is turned off.

**Turn Off:** This mode will immediately initiate fan mode.

\* If you're a new user, we recommend that you use the Keep Warm setting.




**Pro Tip:** If your grill goes into fan mode and food is not ready, do a hot restart. See page 66 for proper bypass mode instructions.

# Starting Profiles




Before you begin using a previously created profile, make sure the grill is warmed up. Then:

1. Press the Select Grill Profile button.

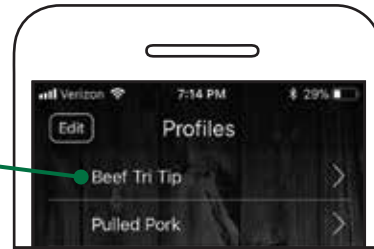


2. Choose the profile you would like to run.

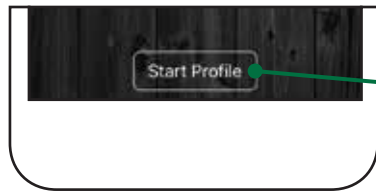


3. Press the Start Profile button.

4. Press Confirm.

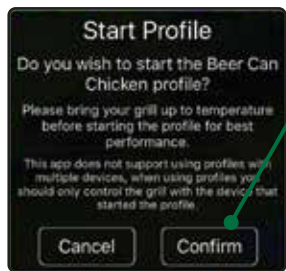


 
Profiles are loaded into the grill's memory, and will continue to run even if your phone is disconnected.



# Editing Profiles


To edit a profile:

1. Tap the profile.

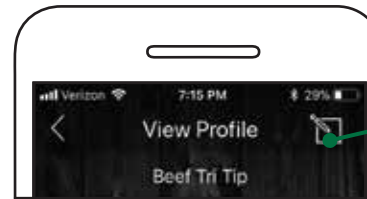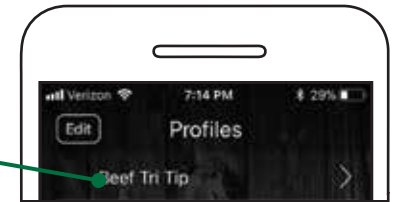


2. Tap the Edit button. The edit mode will open.

3. To set the grill temp, stop time or set the food probe temp, tap the relevant button.


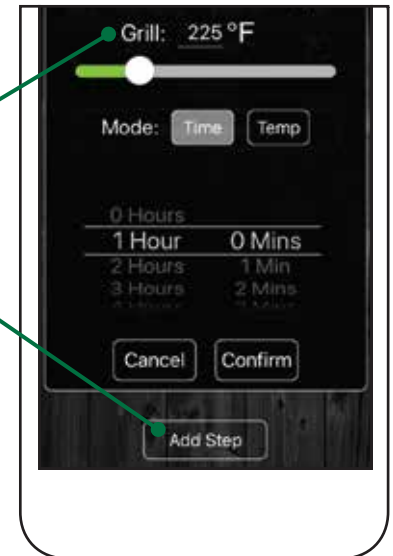


4. To add a step, tap Add Step. To remove one, tap Delete.

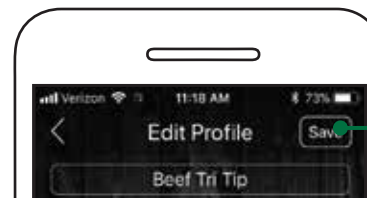

5. Tap the Save button to save your edits.

# Deleting Profiles

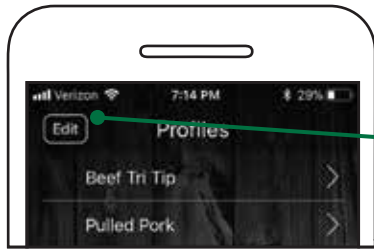 


To delete a profile:

1. Tap the Edit button



2. Press the red Delete button.

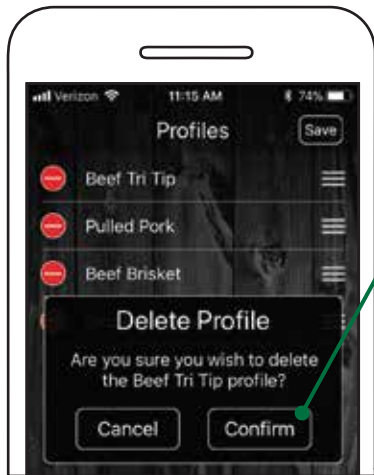

3. Press Confirm.

To move profiles around, press down the 3 bars next to them. Then you can pull them up or down your list.




# Recipes




You have access to all of our great GMG recipes at your fingertips!

Scroll through our 12 different recipe categories to find what you're in the mood for.

Use the icon menu at the top to switch between categories.

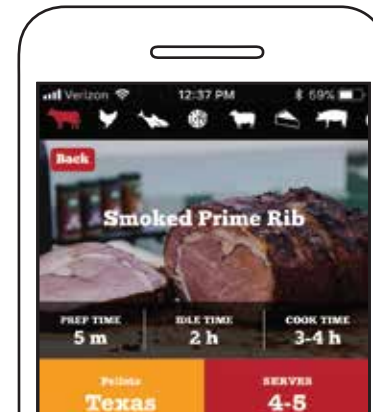

# Settings Screen

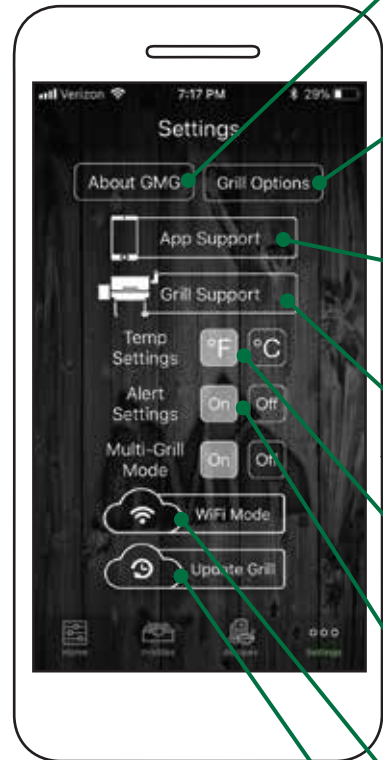

About GMG provides contact info, mission statement and app version.

Grill Options allow you to better calibrate your grill configuration.

Access App Support tutorials, FAQs and contact info.

Access grill support tutorials, FAQs and contact info.

Change temperature settings.

Toggle app notifications.

Access WiFi/Server Mode.

Update grill firmware system.



# Firmware Version Check

To check what version of GMG firmware your grill is running, follow these steps:



1. Unplug the power cord from the back of the unit.

2. Hold down the up button. While holding it down, plug the cord back into the grill and continue to hold down the button.

The LCD screen will flash the version number. If no version number is displayed, you will need to update the firmware. See page 100 for firmware updating.



## Latest Firmware Versions:

- Daniel Boone - 1.2
- Jim Bowie - 1.2
- Davy Crockett - 6.7

*\* Subject to change with updates*

# Control Board Reset



To reset the system to default settings:



1. Unplug the power cord from the back of the unit.

.....

### DB & JB Models

2. Hold down the PROBE 1 button.

.....

### DC Model

2. Hold down the FOOD button.

.....

3. While holding it down, plug the power cord back into the grill. Continue to hold down the button for about 15 seconds.



.....

The grill will count up from 0 to 999 then display off.

.....

The grill is now reset to default.

# Updating Grill Firmware



To update your grill's firmware you will need to connect your grill to your home WiFi network and download the update. Firmware updates and application updates are separate. You will need to be at least within 20 feet of your home network. Updating your firmware typically isn't necessary unless you are experiencing an issue with the device.




First, make sure the grill is on, and the LCD is displaying "off". Make sure you are not cooking while you attempt the update.

.....

Next select the Update Grill button to begin the update process.

# Updating Grill Firmware

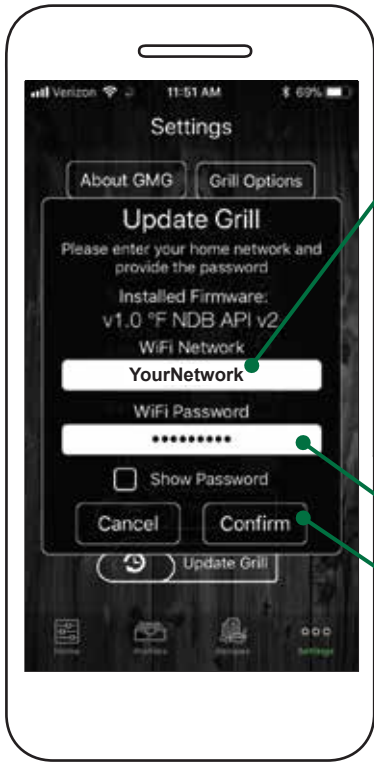


Select the network you would like to use to update your grill. The network must have a live network connection.

**Android:** Select the network from the drop down menu.

**iOS:** Type in your network (case sensitive).

Enter the password for your network and press Confirm. The password is case sensitive.

Your grill's LCD panel will display "UPD" and connect to your local network. Once connected, the grill will start downloading the new firmware.

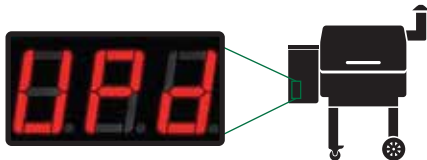

# Updating Grill Firmware



The LCD screen will start at "0" and climb to "100." If the update is successful, the LCD panel will display "SUC."



Once you see "SUC" unplug the grill and plug it back in again. The system will now install the update and verify if it is installed correctly. You will see the grill count from "000" to "100" during this time. When the update is complete, the grill will display "off". It will then disconnect from your local network and broadcast via the GMG network again.



If the update is unsuccessful, the LCD panel will display "FAL."



## If your update fails:

1. You are not close enough to your home network (needs to be within 20 feet).
2. You don't have the latest version of firmware and the package update can't download.
3. Your network does not have a password or is not compatible with the grill.



### Single-Grill Mode:

Connect to your grill in the default point-to-point mode on the GMG network. Make sure the Connect button is active and the app is reading the grill temperature.

.....

Navigate to the Settings tab and select the WiFi Mode button.

.....

The next steps will connect your GMG grill to your home network.



**Android:** Choose your network from the drop down menu.

.....

**iOS:** Type in your network name (case sensitive).


.....

Please be within 20 feet of your home router for the initial update.

.....


Now that the network is selected, enter your password. Check the Show Password box to display the characters (passwords are case sensitive).

# Connecting to WiFi

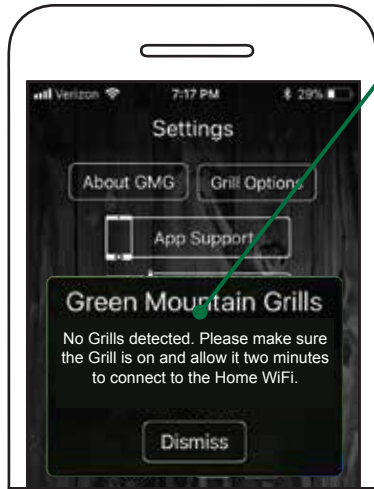

If you try to connect too early, you may receive a “No grills detected” message. This means that a grill was not found during the searching phase. Please try again, but allow additional time for grills to be found. If you continue to have difficulty connecting, please contact App Support. After the grill has been connected to your home network, connect your phone or tablet to your home network as well.


Return to the app’s Home screen and press the Connect button.

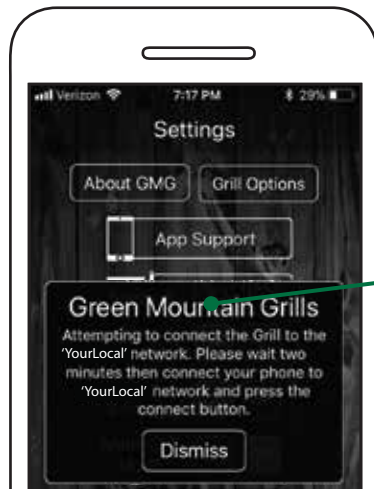

This process has several steps and will show various windows.



# Connecting to WiFi

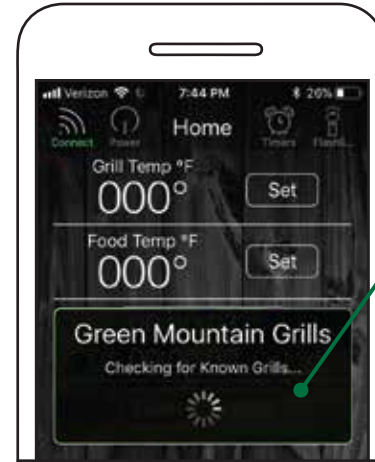

First, it will check for known grills. Since you haven't connected before, it will not find any. In the future, this will speed up the process of connecting.

Next, the app will search for grills on the local network. This step will start the broadcast mode.



# Connecting to WiFi



 
Now that the grill is in broadcast mode, the next step is to switch it to the client mode. This step requires the grill to briefly disconnect and reconnect to the router with a new configuration, which takes around a minute.

**Note:** This step only occurs either the first time you connect, after turning the grill on or after switching it over to a home network for the first time. Future connections will be much faster as long as the grill is left on.

We are almost there. The grill has been detected and the app is now attempting to connect.

The dialogue should now display "Connected, Happy Grilling!" Temperature readings should be coming shortly thereafter.

**Congrats!** Your grill is now connected over local WiFi.



# Server Mode



Welcome to the future of barbecue!

**Server mode** is designed for remote monitoring and grill control when you are outside of your home WiFi network. You can monitor the grill while out running errands or just hanging out at home.

## Capabilities:

- Turn on the grill (only from home WiFi network)
- Turn off the grill
- Increase/decrease the grill temp
- Set the food probe temp
- Start/stop a food profile

## Notifications:

You will be notified when:

- The target temperature hits on the grill or food probe
- When a profile step or profile is complete
- The low pellet alarm is activated

# Connecting to the Server



Your grill must be connected to your local home WiFi network before you can connect to the GMG server.

See page 107 for assistance with connecting to WiFi.



Go to the app settings. The WiFi mode should now be set to Server.

Tap the Server Mode button.

A prompt will display. Enter your home WiFi network and password, then press Confirm.



# Connecting to the Server

The grill will take approximately 30 – 45 seconds to contact and connect to the GMG Server.

When the grill connects, a prompt will appear, saying "Grill Connected to Server."




Go to the app's Home screen. It should now display the last known grill temp.

A new Refresh button will appear in the upper left-hand corner in place of the Connect button.

Tap the Refresh button to display the last date and time the grill connected to the server.

The grill is now in server mode! Monitor and control the grill from any cell phone network.

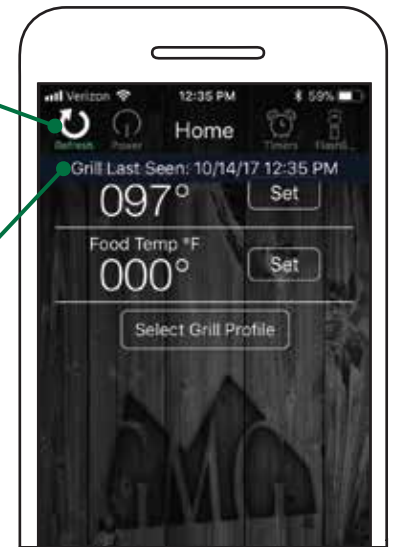

# Connecting to the Server



## Pro Tips:

1. You must have firmware version 1.2 or higher to use server mode. See page 102 for instructions on checking your firmware. For instructions on updating your firmware, see page 104.
2. Make sure your Android or iOS app is up to date.
3. For safety reasons, you can only turn on the grill using server mode if you are within range of your WiFi network.



### To disconnect from server mode:

Go to the Settings tab.

Click the Leave Server button.

The grill should be set back to WiFi mode. To reconnect to the grill, press Connect on the Home screen.

In some situations, the grill will go back to point-to-point mode. If this happens, repeat the WiFi connection process. See page 107 for details.

Happy Grilling!



# Multi-Grill Mode



If you have more than one grill with WiFi, you can control each grill separately. You will need to connect to each grill separately and connect them to your local WiFi following the steps in single-grill mode.

### Next, follow these steps:

#### Single-grill mode

connects immediately to the first grill it finds. By default the app starts in single-grill mode because it is the most common configuration.

**Multi-grill mode** extends these steps a little longer than normal to allow it to find every available grill on the network.



After you press Connect in multi-grill mode, the GMG app will search for all available grills on the local network and display them in the Select Grill pop-up window.



Choose between the grills displayed in the toggle bar.

Grills are identified by their serial number.

After selecting a grill, press Confirm to connect.

## APP SUPPORT




For troubleshooting and service tips, check out: [www.greenmountaingrills.com/support](http://www.greenmountaingrills.com/support)

**Call** 1.800.603.3398 - Option 15

**Email** [AppSupport@greenmountaingrills.com](mailto:AppSupport@greenmountaingrills.com)

**Hours** 10 am - 6 pm PST M - F, 9 am - 5 pm PST Saturdays  
(Closed on Sundays and major holidays)
 
## GRILL SUPPORT



For troubleshooting and service tips, check out:  
GMG "How To" Videos  
[www.greenmountaingrills.com/support](http://www.greenmountaingrills.com/support)

**Call** 1.800.603.3398 - Option 1

**Hours** 7 am - 7 pm PST M - F, 9 am - 6 pm PST Sat - Sun  
(Closed on major holidays)

### Contact Us:

Green Mountain Grills LLC.  
316 California Ave. Suite 1065  
Reno, NV 89509

**Toll Free** 1.800.603.3398

**Phone** 530.347.9167

**Fax** 530.347.9710



We've got you covered!