

INSTALLATION INSTRUCTIONS FOR INSTALLING GV230 BAFFLE BOARD KIT FOR USE WITH THE GRANDVIEW™ 230 WOODSTOVE

KIT CONTENTS (See Figure 1)

Please ensure that all these parts are in the packaging.

- 1 ea. Back Baffle Board
- 1 ea. Front Baffle Board
- 1 ea. Instruction Sheet

CAUTION: The baffle boards are required for your appliance to function correctly and safely.

Baffle Brick Kit	
Cat. No.	Description
H8379	Grandview 230 Baffle Board Kit

TOOLS NEEDED

None

GENERAL INFORMATION

If the original baffle boards have deteriorated over time, they can be replaced using this replacement baffle board kit.

If you encounter any problems, need clarification of these instructions or are not qualified to properly install this kit, contact your local distributor or dealer.

Read this instruction sheet in its entirety before beginning the installation.



ALL WARNINGS AND PRECAUTIONS IN THE INSTALLATION AND OPERATION MANUAL PROVIDED WITH THE APPLIANCE APPLY TO THESE INSTRUCTIONS.

TURN OFF THE APPLIANCE AND ALLOW IT TO COMPLETELY COOL BEFORE PROCEEDING.

CAUTION: Wear gloves during baffle board installation in case of sharp edges inside the stove.

Check the contents of the kits upon receipt and check for any damaged or missing parts. If there is hidden damage, notify your freight company or IHP dealer immediately.

Step 1. Install the baffle boards in their correct location and resting on the secondary burn tubes as shown in **Figure 2**.

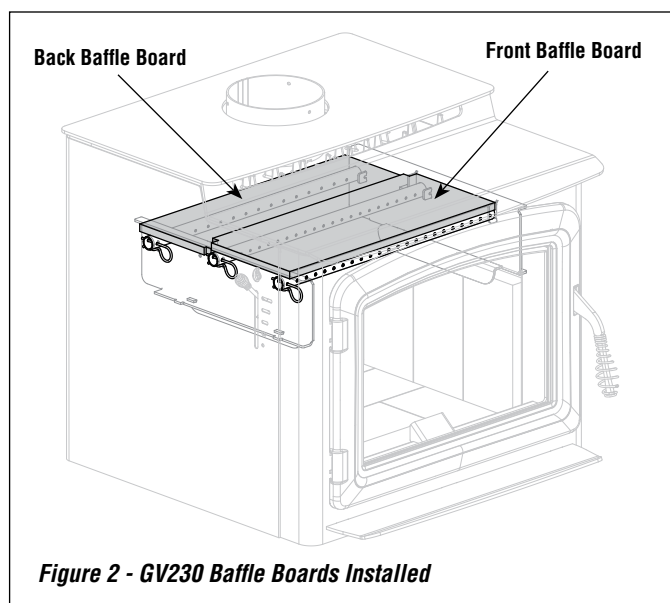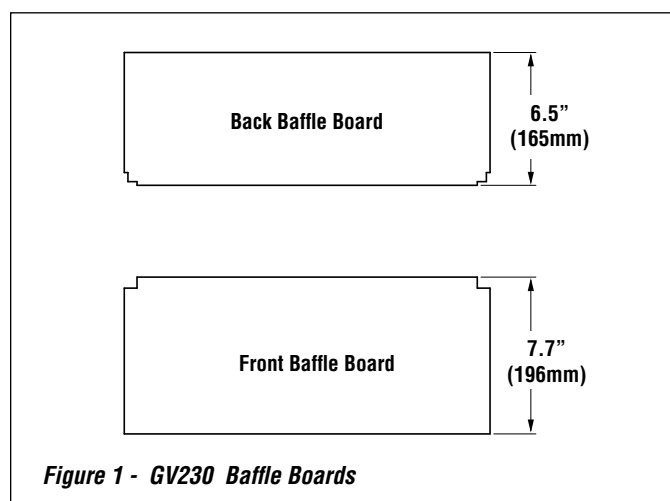

NOTE: DIAGRAMS AND ILLUSTRATIONS ARE NOT TO SCALE

IHP reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and also to discontinue colors, styles and products. Consult your local distributor for fireplace code information.