

Fan Speed Controller Relocation

The fan speed controller is factory installed under the ash lip on the right hand side. If required, it can be relocated to the left side by following the instructions below. To make this as easy as possible, it is suggested that this be done prior to fitting the surround and installation into the fireplace:

1. Remove the decorative top by tilting up slightly and lifting away from the unit (Figure 19).
2. Lift up on each fan shield and remove. Set aside to prevent damage (Figure 20).



Figure 19: Decorative cover removal.

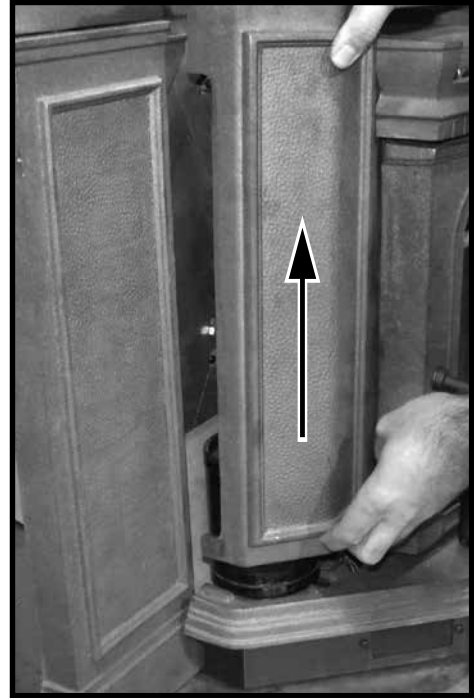


Figure 20: Fan shield removal.

3. Disconnect the wires from the fans, Left & Right Side (Figure 21). Unscrew thermal snap switch leaving the wires connected (Figure 22). Take note of where the wires are routed and secured. They must be positioned correctly to avoid damage.



Figure 21: Disconnecting fan wires.



Figure 22: Unscrew thermal snap switch.